
Factory Default Configuration

Communication Mode : USB

Trigger Mode : Manual mode

Terminator : CR。



Factory Default Configuration

Setup Code



*open Parameter code



close Parameter code

Product information

一、Communication Mode

1. Serial Port

Using Serial Port , read module and the host devices must match exactly in communication parameter configuration, to ensure smooth communication and content are correct, Serial Port is configured to: 9600 baud, 8 bits of data, no parity, 1 stop bit



Serial Port

(1) Baud Rate

The default baud rate is 9,600



1200bps



2400bps



4800bps



* 9600bps



19200bps



57600bps



38400bps



115200bps

(2) parity



Odd



Even



* None

(3) Stop bit



2. USB KBW



3. USB COM



二、 Trigger Mode

1. Manual mode

Press the button to trigger the reading, release the button to end the reading. Reading success or reading time over a single reading time will end the reading.



2. Continuous Mode

The reading engine performs continuous work. Reading success or reading time over a single reading time will end the reading. More than the specified time will automatically trigger the next reading



Continuous Mode

(1) Interval Time

The interval time between two readings in continuous mode. Regardless of the last success or failure to read, more than the specified time will automatically trigger the next reading.

Default: 500ms,unit: 100ms,range: 0-9900ms

To set a Interval Time, scan the bar code below. Next scan two [Numeric Bar Codes](#) in appendix that correspond to the desired time-out. Single digit values must have a leading zero. For example, to set a time-out of 0.5 seconds, scan the bar code below, then scan the “0” and “5” bar codes. To change the selection or cancel an incorrect entry, scan [Cancel](#) in appendix.



Interval Time
(Default: 500ms.)

3. Automatic Induction Mode

In automatic induction mode, the scan engine detects the brightness of the surroundings. Trigger reading when the brightness changes.

Reading success or reading time over a single reading time will end the reading. Regardless of the last success or failure to read, re-enter the detection of the surrounding environment brightness.



Automatic Induction Mode

(1) Stability of Induction Time

Stability of induction time, Default: 500ms, unit:100ms, range: 0-9900ms

For example:

Set stability of induction time is 200ms

Scan stability of induction time setting code,then scan [Numeric Bar Codes](#) 0 and 2

Set stability of induction time is 1500ms

Scan stability of induction time setting code,then scan [Numeric Bar Codes](#) 1 and 5



Stability of Induction Time

(2) Sensitivity Level

There are three levels of sensitivity to choose from,Default: 500ms



*High



Middle



Low

4. Duration in Scanning

This parameter sets the maximum time decode processing continues during a scan attempt. It is programmable in 0.1 second increments from 0.50 to 25.5 seconds.

To set a duration in scanning, scan the bar code below. Next scan three [Numeric Bar Codes](#) in appendix that correspond to the desired on time. Single digit numbers must have a leading zero. For example, to set an on time of 0.5 seconds, scan the bar code below, then scan the "0", "0" and "5" bar codes; to set an on time of 10.5 seconds, scan the bar code below, then scan the "1", "0" and "5" bar codes. To change the selection or cancel an incorrect entry, scan [Cancel](#) in appendix.



Duration in Scanning(Default: 3.0 sec.)

5. Output Interval of The Same Code

To avoid reading the same barcode multiple times in continuous mode and automatic induction mode, set the scan engine to allow reading the same barcode after a delay.

Output interval of the same code is to refuse to read the same barcode within the set length of time.

Default: 500ms, unit:100ms, range: 0-9900ms

To set output interval of the same code, scan the bar code below. Next scan two Numeric Bar Codes in appendix that correspond to the desired time-out. Single digit values must have a leading zero. For example, to set a time-out of 0.5 seconds, scan the bar code below,

then scan the “0” and “5” bar codes. To change the selection or cancel an incorrect entry, scan Cancel in appendix.



Output Interval of The Same Code

三、Floodlight and Positioning lights

1. Floodlight



* Lighting when Read



Always Lighting



Always Close

2. Positioning lights



* Lighting when Read



Always Lighting



Always Close

四、Output、prompt

1. Language Keyboard



* American Keyboard



Belgium



Finland



France



Germany



Italy



Sweden



England



Denmark



Norway



Spain



2. Prompt sound

(1) Mute





* Close

(2) **Beeper Volume**



* High



Middle



Low

(3) **Beep After Good Decode**



*Open



Close

(4) Boot prompt



*open



Close

(5) Setup Code Prompt



*open



Close

3. Transmit “No Read” Message

Enable this option to transmit “NR” if a symbol does not decode during the timeout period or before the trigger is released. Any enabled prefix or suffixes are appended around this message.

When disabled, and a symbol cannot be decoded, no message is sent to the host.



***Disable No Read**



Enable No Read

4. Letter case conversion

For example If the Barcode content is : ab123dE, if set to " all uppercase ", the output is : AB123DE ; if set to "all lowercase", the output is :ab123de ; if set to " Case Inversion", the output is :AB123De ;

Default: **Normal Letter Case**



*** Normal Letter Case**



all uppercase



all lowercase



Case Inversion

5. Data encoding format

1:GBK(GB2312),

2:UNICODE,



*GBK



Unicode

6. Invoice Function



* Disable



Enable

四、Data editor

1. Code ID

The user can identify different barcode types by CODE ID, and CODE ID USES a character to identify them



*Disable send Code ID



Enable send Code ID

2. Terminator

Add character format: Decode Data+Terminator.



*None



CR LF



CR



TAB

五、Code Enable/Disable

1. UPC-A



* Enable



Disable

2. UPC-E



* Enable



Disable

3. EAN-8



* Enable



Disable

4. EAN-13



* Enable



Disable

5. Bookland EAN



Enable



* Disable

6. UPC/EAN Supplementals



*Ignore UPC/EAN with Supplementals



Autodiscriminate UPC/EAN Supplementals



Decode UPC/EAN with Supplementals

7. CODE 128



* Enable



Disable

8. GS1-128



* Enable



Disable

9. ISBT-128



* Enable



Disable

10. Interleaved 2 of 5



* Enable



Disable

Set Lengths for Interleaved 2 of 5

For example, to decode **Interleaved 2 of 5** symbols containing between 4 and 12 characters

first scan **Interleaved 2 of 5-Length Within Range**, then scan **0**, **4**, **1** and **2** (single digit numbers must be preceded by a leading zero). [Numeric Bar Codes](#) is in appendix. To change the selection or cancel an incorrect entry, scan [Cancel](#) in appendix.



I 2 of 5 - Length Within Range



I 2 of 5 - Any Length

11. Matrix 2 of 5



Enable



***Disable**

Set Lengths for Matrix 25

For example, to decode Matrix 25 symbols containing between 4 and 12 characters

first scan **Matrix 25 Length Within Range**, then scan **0**, **4**, **1** and

2 (single digit numbers must be preceded by a leading zero). [Numeric Bar Codes](#) is in appendix. To change the selection or cancel an incorrect entry, scan [Cancel](#) in appendix.



Matrix 25 - Length Within Range



Matrix 25 - Any Length

12. Industrial 2 of 5



Enable



*** Disable**

Set Lengths for Industrial 2 of 5

For example, to decode **Industrial 2 of 5** containing between 4 and 12 characters

first scan **Industrial 2 of 5 Length Within Range**, then scan **0, 4, 1** and **2** (single digit numbers must be preceded by a leading zero). [Numeric Bar Codes](#) is in appendix. To change the selection or cancel an incorrect entry, scan [Cancel](#) in appendix.



D 2 of 5 - Length Within Range



D 2 of 5 - Any Length

13. Standard 2 of 5



Enable



* Disable

Set Lengths for Standard 2 of 5

For example, to decode **Standard 2 of 5** containing between 4 and 12 characters

first scan **Standard 2 of 5 Length Within Range**, then scan **0, 4, 1** and **2** (single digit numbers must be preceded by a leading zero). [Numeric Bar Codes](#) is in appendix. To change the selection or cancel an incorrect entry, scan [Cancel](#) in appendix.



Standard 25 - Length Within Range



Standard 25 - Any Length

14. Code 39



* Enable



Disable

15. Code 39 Full ASCII



Enable



* Disable

16. Code 93



17. Code 11



18. Codabar



19. MSI



Enable



* Disable

20. GS1-Databar



Enable



* Disable

21. QR Code



* Enable



Disable

22. Data Matrix



* Enable



Disable

23. PDF 417



* Enable



Disable

24. Aztec code



Enable



* Disable

25. Maxi code



Enable



* Disable

26. Hanxin



Enable



* Disable

Appendix 1 : numbered bar code

For parameters requiring specific numeric values, scan the appropriately numbered bar code(s).





5



6



7



8



9

Appendix 2 : CANCEL

To change the selection or cancel an incorrect entry, scan the bar code below.



Cancel

Appendix 3 : Code ID

Code character	Code type
A	UPC-A, UPC-E, EAN-8, EAN-13
B	Code 39, Code 32
C	Codabar
D	Code 128, ISBT 128
E	Code 93
F	Interleaved 2 of 5
G	Discrete 2 of 5
H	CODE11
J	MSI, MSI/Plessey
K	GS1-DataBar, /UCC/EAN-128
L	Bookland EAN, Bookland EAN/ISBN
M	Trioptic Code 39
N	Coupon Code
R	GS1 DataBar-14, GS1 DataBar Limited, GS1 DataBar Expanded, RSS
S	SETUP128
r	PDF417
u	DataMatrix(DM)
q	QR
a	Aztec Code
x	Maxi Code
v	Veri Code
c	HanXin
