

# **BARCODEYES BLASTER 2R**



## **2D Barcode Scanner User's Manual**

**V3.6**

# Table of Contents

<b>Table of Contents</b> .....	<b>1</b>
<b>1 Factory Defaults</b> .....	<b>9</b>
<b>2 User Default Settings</b> .....	<b>9</b>
<b>3 Output Settings</b> .....	<b>10</b>
3.1 USB Interface Settings .....	10
3.1.1 USB HID .....	10
3.1.2 USB Virtual Com .....	12
3.2 Rs232 Interface Setting .....	13
3.2.1 Baud rate .....	14
3.2.2 Parity .....	15
3.2.3 Stop Bits .....	15
3.2.4 Data Bits .....	15
3.2.5 Flow Control .....	16
3.3 Keyboard Language .....	17
3.4 Character Encoding .....	21
3.5 Invoice Scan Mode .....	23
3.6 Invisible Character Output Control Settings .....	24
3.7 Keyboard Mode Settings .....	25
<b>4 System Settings</b> .....	<b>28</b>
4.1 Enter Setup and Exit Setup .....	28
4.2 Scan Mode .....	29
4.2.1 Manual Mode .....	29
4.2.2 Automatic Scanning Mode .....	29
4.2.3 Continuous Scanning Mode .....	30
4.3 Sleep Settings .....	35
4.3.1 Enable/Disable Sleep .....	35
4.3.2 Sleep Time Setting .....	35
4.4 Successful Reading Setting .....	36

4.4.1 Enable /Disable Beep .....	36
4.4.2 Enable/Disable the Same Code Beep .....	36
4.4.3 Beep Frequency .....	37
4.4.4 Prompt Tone Duration .....	37
4.4.5 Read Tone Sound .....	38
4.4.6 Enable/Disable the Reminder Light (LED) .....	39
4.4.7 Enable /Disable Same Code LED .....	39
4.5 Other Sound Settings .....	40
4.5.1 Enable/Disable Power tone .....	40
4.5.2 Mute Setting .....	40
4.6 Image Property Settings .....	41
4.6.1 Enable Image extension setting .....	41
4.6.2 Image sharpening .....	41
4.6.3 Decode Timeout Setting .....	42
4.6.4 Vertical Scan .....	43
4.7 Lighting Settings .....	44
4.7.1 Illumination .....	44
4.7.2 Aiming .....	45
4.7.3 Setting of Automatic Lights for Dark Environment .....	46
<b>5 Data Editing .....</b>	<b>47</b>
5.1 Prefix/Suffix Setting .....	47
5.2 Prefix Sequence Setting .....	47
5.3 Customized Prefix .....	48
5.3.1 Enable/Disable Adding Customized Prefix .....	48
5.3.2 Set Customized Prefix .....	48
5.4 Code Type Name Display .....	49
5.5 AIM ID Prefix .....	49
5.6 CODE ID Prefix .....	50
5.6.1 Allow/Prohibit Adding CODE ID Prefix .....	51
5.6.2 Setting CODE ID Prefix .....	51

5.7 Customized Suffix .....	52
5.7.1 Allow / prohibit adding custom suffix .....	52
5.7.2 Setting Custom Suffix .....	52
5.8 Suffix .....	53
5.8.1 Enable / Disable Suffix .....	53
5.9 Field Interception .....	55
5.10 GS Character Conversion .....	56
5.10.1 Enable/ Disable GS character conversion .....	56
5.10.2 Set GS Character conversion .....	56
5.10.3 Quick Setting Code for Special GS Conversion .....	57
5.11 Character Replacement .....	58
5.12 Set NGR Information .....	59
5.12.1 Enable/ Disable Send NGR .....	59
5.12.2 Set NGR Information .....	59
<b>6 Barcode Parameter Settings .....</b>	<b>60</b>
6.1 Overall Settings .....	60
6.1.1 Enable/Disable Reading All Barcodes .....	60
6.1.2 Enable/Disable Reading All 1D Barcodes .....	60
6.1.3 Enable/Disable Reading All 2D Barcodes .....	60
6.1.4 Enable/Disable Reading All 1D/2D Reverse Barcodes .....	61
6.2 Code128/AIM128/EAN128/NL128 .....	62
6.2.1 Enable/Disable .....	62
6.2.2 CODE ID .....	62
6.2.3 Length Settings .....	63
6.2.4 GS1-128 Output Enable .....	64
6.3 UPC/EAN/ISSN/ISBN .....	64
6.3.1 Enable/Disable Scan .....	64
6.3.2 CODE ID .....	64
6.3.3 Parity Bits Transmission .....	65
6.3.4 Set Whether to Enable Scan Additional Codes .....	66

6.3.5 Set Whether Additional Code is Required .....	66
6.3.6 Extension Settings .....	67
6.4 Codabar .....	68
6.4.1 Enable/Disable Scan .....	68
6.4.2 CODE ID .....	68
6.4.3 Parity .....	69
6.4.4 Length Settings .....	70
6.4.5 Send Start/stop character setting .....	71
6.5 Code 39 .....	72
6.5.1 Enable/Disable Scan .....	72
6.5.2 CODE ID .....	72
6.5.3 Parity .....	73
6.5.4 Expand Support .....	75
6.5.5 Full ASCII Support .....	75
6.5.6 Length Settings .....	76
6.5.7 Send PREFIX Character (A) .....	77
6.5.8 CODE39 Send Leading Character (*) .....	77
6.6 Code 32 .....	78
6.6.1 Enable/Disable Scan .....	78
6.6.2 CODE ID .....	78
6.6.3 Send PREFIX Character (A) .....	78
6.6.4 Length Settings .....	79
6.7 Code 93 .....	80
6.7.1 Enable/Disable Scan .....	80
6.7.2 CODE ID .....	80
6.7.3 Parity .....	81
6.7.4 Full ASCII Support .....	82
6.7.5 Length Settings .....	83
6.8 Code 11 .....	84
6.8.1 Enable/Disable Scan .....	84

6.8.2 CODE ID .....	84
6.8.3 Parity .....	85
6.8.4 Length Settings .....	86
6.9 ITF-25/ITF-14/ITF-6/ Deutsche12/ Deutsche14 .....	87
6.9.1 Enable/Disable .....	87
6.9.2 CODE ID .....	87
6.9.3 Parity .....	88
6.9.4 Length Setting .....	89
6.10 Industrial 25 .....	90
6.10.1 Enable/Disable Scan .....	90
6.10.2 CODE ID .....	90
6.10.3 Parity .....	91
6.10.4 Length Settings .....	92
6.11 Matrix 25 .....	93
6.11.1 Enable/Disable scan .....	93
6.11.2 CODE ID .....	93
6.11.3 Parity .....	94
6.11.4 Length Settings .....	95
6.12 NEC 25 /Japan Matrix 25 .....	96
6.12.1 Enable/Disable Scan .....	96
6.12.2 CODE ID .....	96
6.12.3 Parity .....	97
6.12.4 Length Settings .....	98
6.13 Standard 25 .....	99
6.13.1 Enable/Disable Scan .....	99
6.13.2 CODE ID .....	99
6.13.3 Parity .....	100
6.13.4 Length Settings .....	101
6.14 Data Logic 25 .....	102
6.14.1 Enable/Disable scan .....	102

6.14.2	CODE ID .....	102
6.14.3	Parity .....	103
6.14.4	Length Settings .....	104
6.15	MSI-Plessey .....	105
6.15.1	Enable/Disable Scan .....	105
6.15.2	CODE ID .....	105
6.15.3	Parity .....	106
6.15.4	Lengths Settings .....	107
6.16	Plessey .....	108
6.16.1	Enable/Disable Plessey Scan .....	108
6.16.2	CODE ID .....	108
6.16.3	Lengths Settings .....	109
6.17	RSS-EXP /RSS_14/GS1 Data .....	110
6.17.1	Enable/Disable RSS-EXP /RSS_14/GS1 Data .....	110
6.17.2	Enable/Disable RSS14 LIMIT .....	110
6.17.3	Enable/Disable RSS14_STACK .....	110
6.17.4	Enable / Disable RSS EXPANDED .....	111
6.17.5	Enable/Disable RSS EXPANDED STACK .....	111
6.17.6	CODE ID .....	111
6.18	Telepen .....	112
6.18.1	Enable/Disable Telepen .....	112
6.18.2	CODE ID .....	112
6.18.3	Lengths Settings .....	113
6.19	Pharma Code One-Track .....	114
6.19.1	Enable/Disable Pharma Code One-Track .....	114
6.19.2	CODE ID .....	114
6.19.3	Lengths Settings .....	115
6.20	PharmaCode Two-Track .....	116
6.20.1	Enable/Disable PharmaCode Two-Track .....	116
6.20.2	CODE ID setting .....	116

6.20.3 Lengths Settings .....	117
6.21 AZTEC .....	118
6.21.1 Enable/Disable AZTEC .....	118
6.21.2 Enable/Disable reverse .....	118
6.21.3 CODE ID .....	118
6.21.4 Lengths Settings .....	119
6.22 CODABLOCK A .....	120
6.22.1 Enable/Disable CODABLOCK A .....	120
6.22.2 CODE ID .....	120
6.22.3 Length Settings .....	121
6.23 CODABLOCK F .....	122
6.23.1 Enable/Disable CODABLOCK F .....	122
6.23.2 CODE ID .....	122
6.23.3 Length Settings .....	123
6.24 Data Matrix .....	124
6.24.1 Enable/Disable Data Matrix .....	124
6.24.2 Enable/Disable reverse .....	124
6.24.3 CODE ID .....	124
6.24.4 Length Settings .....	125
6.24.5 GS1_DM Output Enable .....	126
6.25 MaxiCode .....	126
6.25.1 Enable/Disable Maxi Code .....	126
6.25.2 CODE ID .....	126
6.25.3 Length Settings .....	127
6.26 PDF417 .....	128
6.26.1 Enable/Disable PDF417 .....	128
6.26.2 Enable/Disable reverse .....	128
6.26.3 CODE ID .....	128
6.26.4 Length Settings .....	129
6.27 Micro PDF .....	130

6.27.1 Enable/Disable Micro PDF .....	130
6.27.2 Enable/Disable Reverse .....	130
6.27.3 CODE ID .....	130
6.27.4 Length Settings .....	131
6.28 QR Code .....	132
6.28.1 Enable/Disable Scan QR Code .....	132
6.28.2 Enable/Disable Reverse .....	132
6.28.3 CODE ID .....	132
6.28.4 Length Settings .....	133
6.29 Micro QR .....	134
6.29.1 Enable/Disable Scan Micro QR .....	134
6.29.2 Enable/Disable Reverse .....	134
6.29.3 CODE ID .....	134
6.29.4 Length Settings .....	135
6.30 Han Xin Code .....	136
6.30.1 Enable/Disable Reading Han Xin Code .....	136
6.30.2 Enable/Disable Reverse .....	136
6.30.3 CODE ID .....	136
6.30.4 Length Settings .....	137
6.31 DOTCODE .....	138
6.32 OCR .....	138
<b>7 Batch Processing .....</b>	<b>139</b>
<b>8 Appendix .....</b>	<b>141</b>
8.1 System Default Setting Table .....	141
8.2 Barcode Default Setting Table .....	143
8.3 AIM ID List .....	148
8.4 CODE ID List .....	150
8.5 ASCII code .....	152
8.6 CTRL+mode output .....	156
8.7 Data code .....	157



Enter setup

# 1 Factory Defaults

**Factory Defaults:** The communication mode will be restored to HID-KBW. For other default values, please refer the "[System Default Setting Table](#)", "[Barcode Default Setting Table](#)" in the Appendix.



Restore All Factory Defaults

\$>:S010186.<\$

# 2 User Default Settings

The user can set the required configuration according to the use environment, and then scan "Save Current Setting" to save the current configuration as the user default configuration. If the user default settings have been set before, this operation will replace the original user default settings information. The initial user default configuration can be restored by scanning "Restore User Default Setting"



Save Current Setting

\$>:SVDEF02.<\$



Restore User Default Setting

\$>:S020286.<\$



Exit setup



Enter setup

## 3 Output Settings

### 3.1 USB Interface Settings

When using USB to connect the scanner and host, users can choose USB HID-KBW, USB virtual serial port or USB HID-POS according to actual needs.

#### 3.1.1 USB HID

##### USB HID-KBW:

In keyboard mode, place the mouse cursor on the notepad, etc., and the data will be entered into the notepad after successful decoding.

##### USB HID POS:

Use HID POS protocol to communicate



USB HID-KBW  
\$>:S0F0116.<\$  
(Default)



USB HID POS  
\$>: S0F0516.<\$



Exit setup



Enter setup

## Upload Data Delay Setting



No Delay

\$>:SC00037.<\$

(Default)



Delay (20ms)

\$>:SC04037.<\$



Delay (40ms)

\$>:SC0C037.<\$



\$>:R0001E2.<\$

Delay setting

(Any interval)

The data delay is actually delayed according to the character, and the unit is 1ms ( milliseconds).

**For Example: Set the delay 10ms (data code is expressed in hexadecimal)**

- 1) Scan code“Enter Setup”
- 2) Scan code “Delay setting”
- 3) Scan [Data code](#) “0” “A” (in Appendix)
- 4) Scan code “Save ” (in Appendix)
- 5) Scan code “Exit Setup”



Exit setup



---

### 3.1.2 USB Virtual Com

**USB Virtual Com:** Enumerate into a virtual serial port. At this time, the PC needs to use the serial port assistant to receive data.



USB Virtual Com  
\$>: S0F0216.<\$





Enter setup

---

## 3.2 Rs232 Interface Setting

Rs232 interface is a common way to connect scanner and host equipment (such as PC, POS and other equipment). When using the RS232 interface, the scanner and the host device must match the communication parameter configuration completely to ensure smooth communication and correct content.



Rs232

\$>: S0F0016.<\$



Exit setup



Enter setup

### 3.2.1 Baud rate

Baud rate is the number of bits of data transmitted per second. Set the baud rate to match the host requirements.



1200bps

\$>:S0F0047.<\$



2400bps

\$>:S0F0147.<\$



4800bps

\$>:S0F0247.<\$



9600bps

\$>:S0F0347.<\$

(Default)



14400bps

\$>:S0F0447.<\$

(Not support)



19200bps

\$>:S0F0547.<\$



38400bps

\$>:S0F0647.<\$



57600bps

\$>:S0F0747.<\$



115200bps

\$>:S0F0847.<\$



Exit setup



Enter setup

---

### 3.2.2 Parity



No Parity

\$>:S060046.<\$

(Default)



Odd Parity

\$>:S060446.<\$

(Not currently supported)



Even Parity

\$>:S060646.<\$

(Not currently supported)

### 3.2.3 Stop Bits



2 Stop Bits

\$>:S010146.<\$

(Not currently supported)



1 Stop Bit

\$>:S010046.<\$

(Default)

### 3.2.4 Data Bits



8 Data Bits

\$>:S080846.<\$

(Default)



7 Data Bits

\$>:S080046.<\$

(Not currently supported)



Exit setup



Enter setup

---

### 3.2.5 Flow Control



Non  
\$>:S600016.<\$  
(Default)



RTS Flow Control  
\$>:S602016.<\$  
(Not currently supported)



CTR Flow Control  
\$>:S604016.<\$  
(Not currently supported)



CTS&RTS Flow control  
\$>:S606016.<\$  
(Not currently supported)



Exit setup



Enter setup

### 3.3 Keyboard Language

The key arrangement, symbols, etc of a keyboard is different due to different national languages. The scanner can be virtualized into keyboard standards of different countries according your needs, and the default is the US keyboard



\* U.S.A (English)

Default

[\\$>:S1F001D.<\\$](#)



Belgium

[\\$>:S1F011D.<\\$](#)



Brazil

[\\$>:S1F021D.<\\$](#)



Canada (French)

[\\$>:S1F031D.<\\$](#)



Czech slovakia

[\\$>:S1F041D.<\\$](#)



Denmark

[\\$>:S1F051D.<\\$](#)



Exit setup



Enter setup



Finland (Swedish)

[\\$>:S1F061D.<\\$](#)



France

[\\$>:S1F071D.<\\$](#)



Germany/ Austria

[\\$>:S1F081D.<\\$](#)



Greece\_

[\\$>:S1F091D.<\\$](#)



Hungary

[\\$>:S1F0A1D.<\\$](#)



Israel (Hebrew)

[\\$>:S1F0B1D.<\\$](#)



Italy

[\\$>:S1F0C1D.<\\$](#)



Latin America

[\\$>:S1F0D1D.<\\$](#)



Exit setup



Enter setup



Netherlands (Dutch)

[\\$>:S1F0E1D.<\\$](#)



Norway

[\\$>:S1F0F1D.<\\$](#)



Poland

[\\$>:S1F101D.<\\$](#)



Portugal

[\\$>:S1F111D.<\\$](#)



Romania

[\\$>:S1F121D.<\\$](#)



Russia

[\\$>:S1F131D.<\\$](#)



Slovakia

[\\$>:S1F151D.<\\$](#)



Spain

[\\$>:S1F161D.<\\$](#)



Exit setup



Enter setup



Sweden

[\\$>:S1F171D.<\\$](#)



Switzerland

[\\$>:S1F181D.<\\$](#)



Turkey\_F

[\\$>:S1F191D.<\\$](#)



Turkey\_Q

[\\$>:S1F1A1D.<\\$](#)



UK

[\\$>:S1F1B1D.<\\$](#)



Japan

[\\$>:S1F1C1D.<\\$](#)



Italy 142

[\\$>:S1F1F1D.<\\$](#)



Thailand

[\\$>:S203F1D.<\\$](#)



Exit setup



Enter setup

### 3.4 Character Encoding

**Original data transmission:**The original decoded data adopts decimal encoding.

**Transfer to internal code to send:** According to the keyboard language settings of different countries, the decoded data will be converted into the corresponding national internal code and sent; please accord with the "keyboard format setting HID-KBW" setting.



Send Original data  
\$>:S070019.<\$  
(Default)



Convert to internal code to send  
\$>:S070319.<\$



Convert to UNICODE  
\$>:S070519.<\$

#### Encoding preset

**Example:** If the barcode's binary code is SHIFT JIS and the content is Russian, at this time, turn off the Chinese output first, select RUSSIA in **Keyboard Language**, and the HID input code is preset to SHIFT JIS, converted to internal code and sent, it will be output correctly Russian.

**When HID transmission mode-original data transmission, HID input code preset-invalid!!!**



Auto  
\$>:SF0000C.<\$  
(Default)



GBK2312  
\$>:SF0100C.<\$



Exit setup



Enter setup

---



UTF-8

\$>:SF0200C.<\$



BIG-5

\$>:SF0300C.<\$



SHIFT JIS

\$>:SF0400C.<\$

## Chinese output quick settings

You can set Chinese output to TXT or WORD.



Chinese output to TXT

\$>:SHTCT01.<\$



Chinese output to WORD

\$>:SHTCT02.<\$



Disable Chinese output

\$>:SHTCT03.<\$



---

Exit setup



Enter setup

### 3.5 Invoice Scan Mode

The QR content format of different invoices is different. After enabling this function, the decoded result will be analyzed and reorganized according to certain rules. Only the national tax is supported.

**National tax regulations:** Start character \$+version number 01+base64 (name</>taxpayer identification number</>address telephone</>account opening bank and account number</>CRC)+terminator \$.



Disable

[\\$>:S0F002A.<\\$](#)

Default



National tax

[\\$>:S01002A.<\\$](#)



Exit setup



Enter setup

## 3.6 Invisible Character Output Control Settings

### Disable/Enable invisible character output



Enable

\$>:S070236.<\$



Disable

\$>:S070736.<\$

(Default)

### F1-F12 Function Key Settings

Function keys refer to F1-F12. To output "Enter", need to set "output function keys"



Output function key

\$>:S070036.<\$

(Default)



Output CTRL key combination

\$>:S070136.<\$

#### Example: Set the prefix "F8" (Hexadecimal value is 0x1D)

- 1) Scan code "Enter setup"
- 2) Scan code "Allow adding custom prefix"
- 3) Scan code "Set Custom Prefix"
- 4) Scan [Data code](#): "1" "D" (in Appendix)
- 5) Scan code "Save" (in Appendix)
- 6) Scan code "Output CTRL key combination"
- 7) Scan code "Exit setup"



Exit setup



Enter setup

## 3.7 Keyboard Mode Settings

### Keyboard input mode



Standard keyboard input mode

\$>:S030037.<\$



Virtual keyboard input mode ALT+NUM

\$>:S030337.<\$



Keyboard emulation input character mode

\$>:S030237.<\$

(Not support)



Keyboard simulation input control

Character Mode

\$>:S030137.<\$

(Not support)

### Analog Numeric Keypad

Analog numeric keypad: Before sending the result of scan code , it will first judge whether num lock is turned on. If it is not turned on, then send a command to turn it on.



Analog numeric keypad

\$>:S040437.<\$



NO simulate the numeric keypad

\$>:S040037.<\$

Default



Exit setup



Enter setup

---

## Caps Lock



No Case Conversion

\$>:S380037.<\$



Letter case interchange

\$>:S380837.<\$



Convert All to Upper Case

\$>:S382037.<\$



Convert All to Lower Case

\$>:S383037.<\$



Exit setup



Enter setup

## ALT+ Num Special Settings

**When outputting internal code**, if use alt+Num model, the first number is 0, the received input method needs to set the corresponding national keyboard, otherwise it may be garbled; if the first digit does not add zero, the received system code needs to be consistent with the internal code output from the scanner, otherwise it may be garbled.

When the keyboard can not output standard ASCII characters, you can choose to use ALT+number instead of output.



Not output the leading 0

\$>:S080036.<\$



Output leading 0

\$>:S080836.<\$

(Default)



Keyless ASCII is not output

\$>:S100036.<\$

(Default)



ALT+Numbers instead of keyless ASCII

\$>:S101036.<\$



Exit setup



Enter setup

---

## 4 System Settings

### 4.1 Enter Setup and Exit Setup

Scanning the “**Enter Setup**” barcode can enable the scanner to enter the setup mode. Then you can scan a number of programming barcodes to configure your scanner.

To exit the setup mode, scan the **Exit Setup** barcode or a nonprogramming barcode, or reboot the scanner.



Enter setup

\$>:S01010F.<\$



Exit setup

\$>:S01000F.<\$

(Default)



Exit setup



Enter setup

---

## 4.2 Scan Mode

### 4.2.1 Manual Mode

Press the button to trigger the reading, and release the button to end the reading. If the reading is successful or the reading time exceeds the single reading time, the reading will end.



\*Manual mode(Command+Button)

\$>: S03001A.<\$

(Default)

### 4.2.2 Automatic Scanning Mode

In the induction mode, you can activate the scanner to work by pressing a button, sending a command, or auto-sensing.



Automatic Mode(Command+Button+Auto-sensing)

\$>: S03011A.<\$



Exit setup



Enter setup

---

### 4.2.3 Continuous Scanning Mode

Under continuous Scanning Mode, after a period of time when a reading is successful, it will automatically start the next reading. Start or end scanning until the button is pressed and released (buttons and commands can be terminated and reopened)



Continuous Mode (buttons + commands)

\$>: S03021A.<\$



Exit setup



Enter setup

---

## Decode Session Timeout



Decode Session Timeout

\$>: R000302.<\$

**Example: Set the reading interval time 500ms (Data code expressed in hexadecimal)**

- 1) Scan code "**Enter setup**"
- 2) Scan code "Decode Session Timeout"
- 3) Scan [Data code](#) "1" (in Appendix)
- 4) Scan [Data code](#) "F" (in Appendix)
- 5) Scan [Data code](#) "4" (in Appendix)
- 6) Scan code "**Save**" (in Appdendix)
- 7) Scan code "**Exit setup**"



Exit setup



Enter setup

---

## Single Scanning Time

Enabling the scanning till the it turned off automatically when the timeout is reached



Single reading timeout

\$>: R000064.<\$

**Example: Set the single reading time 4000ms(The data code is expressed in hexadecimal)**

- 1) Scan code "**Enter setup**"
- 2) Scan code "Single reading timeout"
- 3) Scan code "F" (in Appdendix)
- 4) Scan code "A" (in Appdendix)
- 5) Scan code "0" (in Appdendix)
- 6) Scan code "**Save**" (in Appdendix)
- 7) Scan code "**Exit setup**"



Exit setup



Enter setup

---

## Timeout between Decodes (Same Barcode)

The same barcode reading interval can be controlled by setting the same barcode delay



Disable Timeout between Decodes  
(Same Barcode)  
\$>:S100017.<\$



Enable Timeout between Decodes  
(Same Barcode)  
\$>:S101017.<\$



Same code reading time setting  
\$>: R000322.<\$



Exit setup



Enter setup

---

## Sensitivity

This setting is for Sense Mode. The higher the sensitivity, the more sensitive the scanner is to the image. To avoid mistaken scanning, you can select an appropriate degree of sensitivity that fits the application environment.



Hyper Sensitivity  
\$>:S3F0034.<\$  
(Default)



High Sensitivity  
\$>:S3F0534.<\$



Medium Sensitivity  
\$>:S3F1034.<\$



Low Sensitivity  
\$>:S3F3034.<\$



Exit setup



Enter setup

## 4.3 Sleep Settings

### 4.3.1 Enable/Disable Sleep

**Sleep mode:** Refers to the sleep mode when there is no operation for a period of time, and some resources will be shut down.



Disable automatic sleep

\$>:S200017.<\$

(Default)



Enable automatic sleep

\$>:S202017.<\$

### 4.3.2 Sleep Time Setting



Sleep time

\$>:R000012.<\$

Sleep duration refers to how long it goes to sleep after no action, or how long to wake up after going to sleep.

**Example: Set the sleep time 1000ms (The data code is expressed in hexadecimal)**

- 1) Scan code **"Enter setup"**
- 2) Scan code "Sleep time"
- 3) Scan [Data code](#) "3" (in Appdendix)
- 4) Scan [Data code](#) "E" (in Appdendix)
- 5) Scan [Data code](#) "8" (in Appdendix)
- 6) Scan code **"Save"** (in Appdendix)
- 7) Scan code **"Exit setup"**



Exit setup



Enter setup

## 4.4 Successful Reading Setting

### 4.4.1 Enable /Disable Beep



Enable prompt tone for successful reading

(Setting code)

\$>:S020229.<\$

(Default)



Disable prompt tone for successful reading

(Setting Code)\$

>:S020029.<\$



Enable the prompt tone for successful  
reading (not setting code)

\$>:S040429.<\$

(Default)



Disable prompt tone for successful reading

(not setting code)

\$>:S040029.<\$

### 4.4.2 Enable/Disable the Same Code Beep



Enable

\$>:S010135.<\$



Disable

\$>:S010035.<\$

(Default)



Exit setup



Enter setup

### 4.4.3 Beep Frequency



Low

\$>:SFFDA27.<\$



Medium

\$>:SFF4B27.<\$



Loud

\$>:SFF2527.<\$

(Default)

### 4.4.4 Prompt Tone Duration



40ms (Short)

\$>:SFF1F28.<\$



80ms(Middle)

\$>:SFF3E28.<\$

(Default)



120ms (Long)

\$>:SFF5D28.<\$



Exit setup



Enter setup

---

## 4.4.5 Read Tone Sound



Low

\$>:S030018.<\$



Medium

\$>:S030118.<\$



Loud

\$>:S030218.<\$



Exit setup



Enter setup

---

#### 4.4.6 Enable/Disable the Reminder Light (LED)



Enable the LED  
\$>:S101029.<\$  
(Default)



Disable the LED  
\$>:S100029.<\$

#### 4.4.7 Enable /Disable Same Code LED



Enable  
\$>:S020235.<\$



Disable  
\$>:S020035.<\$  
(Default)



Exit setup



Enter setup

## 4.5 Other Sound Settings

### 4.5.1 Enable/Disable Power tone



\* Enable Power tone  
\$>:S010129.<\$  
(Default)



Disable Power tone  
\$>:S010029.<\$



Buzzer prompt  
\$>:S202029.<\$  
(Default)



Enable unknown character sound  
\$>:S080829.<\$



Disable unknown character beep  
\$>:S080029.<\$

### 4.5.2 Mute Setting



Disable Mute  
\$>:S404000.<\$



Enable Mute  
\$>:S400000.<\$



Exit setup



Enter setup

## 4.6 Image Property Settings

In some application scenarios, the default image may not meet the decoding needs. At this time, you can turn on/off certain image properties (such as Image sharpening) to meet the decoding needs in special scenarios.

The basic steps of image attribute setting are as follows:

- Enable setting code
- Set on/off image properties
- Enable image extension settings

For example, Disable Image Sharpening, follow the setting steps as follows:

- 1) Scan code: Enter setup
- 2) Scan code: Disable Image sharpening
- 3) Scan code: Enable Image extension setting

### 4.6.1 Enable Image extension setting



\$>:S010123.<\$

Enable Image extension  
setting



\$>:S010023.<\$

Disable Image extension  
setting  
Disable (Default)

### 4.6.2 Image sharpening



\$>:S020223.<\$

Enable Imagesharpening  
(Default)



\$>:S020023.<\$

Disable Image  
sharpening



Exit setup



Enter setup

---

### 4.6.3 Decode Timeout Setting

**Decode timeout:** Applied to control the decoder to exit the decoding of the current image with the set timeout time and proceed to the decoding of the next image when the decoding fails.

#### 1D Decoding Timeout Setting



\$>:S01010B.<\$  
Enable 1D code  
timeout  
(Default)



\$>:S01000B.<\$  
Disable 1D code  
timeout

#### 1D DecodeTimeout Setting



\$>:R001A04.<\$  
1D decode timeout time

#### 2D DecodeTimeout Setting



\$>:S02020B.<\$  
Enable 2D code  
timeout  
(Default)



\$>:S02000B.<\$  
Disable 2D code  
timeout



Exit setup



Enter setup

## 2D Decode Timeout Setting



\$>:R001A44.<\$

2D Decode timeout time

### 4.6.4 Vertical Scan

**Function Description:** When this setting is turned on, the decoding will increase the vertical scanning to improve the success rate of the decoding, but if the decoding fails, the decoding time will increase



\$>:S010122.<\$

Enable



\$>:S010022.<\$

Disable

(Default)



Exit setup



Enter setup

## 4.7 Lighting Settings

### 4.7.1 Illumination

Illumination action one: the environment when take the picture;action two: prompt of decoding completion



Off

\$>:SOC0000.<\$



Reading On( default )

\$>:SOC0400.<\$



Always On

\$>:SOC0800.<\$



Exit setup



Enter setup

---

## 4.7.2 Aiming



Off

\$>:S300000.<\$



Reading On(Lit when reading, Default)

\$>:S301000.<\$



Always On

\$>:S302000.<\$



Exit setup



Enter setup

---

### 4.7.3 Setting of Automatic Lights for Dark Environment



\$>:S020021.<\$

Enable

(Default)



\$>:S020221.<\$

Disable

When the dark light environment is enabled, the decoder detects the image according to the set [Detection Time], and judges whether it is in a dark environment according to the [Detection Threshold]. When the detected value is less than the set threshold. Then the decoder automatically turns on the light.



\$>:R0019C2.<\$

Dark light detection  
time setting



\$>:R0019E1.<\$

Dark light detection threshold  
setting

#### Dark light detection time and dark light detection threshold setting steps

- 1) Scan code [Enter setup]
- 2) Scan code [dark light detection time setting] or 【\$>:R0019E1.<\$】
- 3) Scan code [digital code]
- 4) Scan code [Save]
- 5) Scan code [Exit setup]



Exit setup



Enter setup

## 5 Data Editing

In daily applications, we need to edit the data before outputting it to facilitate data differentiation and processing.

Data editing includes: adding prefix, adding suffix, decoding information, adding terminator

The default output sequence of processed data is as follow:

<prefix> <barcode data><suffix><terminator>

### 5.1 Prefix/Suffix Setting



Enable all prefixes and suffixes

\$>:S80804E.<\$

(Default)



Disable all prefixes and suffixes

\$>:S80004E.<\$

### 5.2 Prefix Sequence Setting



Customized prefix + Code ID + AIM ID

\$>:S01014E.<\$



Code ID + Custom prefix + AIM ID

\$>:S01004E.<\$

(Default)



Exit setup



Enter setup

## 5.3 Customized Prefix

**Customized Prefix:** The customized prefix adds a user-defined string before the decoded information. For example, it is allowed to add a customized prefix and set the prefix to the character string "AB". After reading the barcode with the data "123", the scanner adds the character string "AB" before the character string "123", and the host receives "AB123" ;

### 5.3.1 Enable/Disable Adding Customized Prefix



Enable add custom prefixes

\$>:S04044E.<\$



Disable add custom prefixes

\$>:S04004E.<\$

(Default)

### 5.3.2 Set Customized Prefix



Set custom prefix

\$>: R000505.<\$

**Example: Set customized prefix to“CODE”** (The hexadecimal value is **0x43/0x4F/0x44/0x45**)

- 1) Scan code "Enter setup"
- 2) Scan code "Set Custom Prefix"
- 3) Scan [Data Code](#): “4”“3”“4”“F”“4”“4”“4”“5”(in Appendix)
- 4) Scan code "Save "(in Appendix)
- 5) Scan code "Enable add custom prefixes"
- 6) Scan code "Exit setup"



Exit setup



Enter setup

## 5.4 Code Type Name Display

This function needs to set "Allow all types of prefixes and suffixes to be added". Add the code type name at the beginning of the scan code result. For example [QR].



Allow display code type name

\$>:S808082.<\$



Prohibit display code type name

\$>:S800082.<\$

## 5.5 AIM ID Prefix

AIM, known as the Automatic Identification Manufacturers, defines identification codes for various standard bar codes, which are defined in Appendix). The scanner can add this identification code before the barcode data after decoding, that is, the AIM ID prefix.



Allow add AIM ID

\$>:S010182.<\$



Prohibit add AIM ID

\$>:S010082.<\$

(Default)



\$>:DEFXXC2.<\$

All barcode Code ID Restore factory default value



Exit setup



---

## 5.6 CODE ID Prefix

Other than using AIM ID to identify different bar code types, users can also use the Code ID prefix to identify bar code types. Unlike the AIM ID prefix, the Code ID prefix corresponding to each barcode type can be customized. The Code ID of all barcodes consists of 1 or 2 characters, and it must be letters only, numbers, invisible characters, or punctuation marks, etc are not supported.





Enter setup

## 5.6.1 Allow/Prohibit Adding CODE ID Prefix



Allow to add CODE ID prefix  
\$>:S02024E.<\$



Prohibit add CODE ID prefix  
\$>:S02004E.<\$  
(Default)

## 5.6.2 Setting CODE ID Prefix

Please refer to the following example for the method of modifying Code ID.

**Example: Modify the Code ID of Code 128 to "p" (the hexadecimal value is 0x70)**

- 1) Scan code "Enter setup"
- 2) Scan code "Set CODE128 CODE ID "
- 3) Scan [Data code](#): "7"(in Appdendix)
- 4) Scan [Data code](#): "0"(in Appdendix)
- 5) Scan code"**Save**"(in Appdendix)
- 6) Scan code "Allow to add CODE ID prefix"
- 7) Scan code "Exit setup"



Exit setup



Enter setup

## 5.7 Customized Suffix

**Custom Suffix:** The customized suffix is to add a user-defined string after decoding the information. For example, it is allowed to add a custom suffix and set the suffix to the character string "AB". After reading the barcode with the data as "123", the scanner adds the character string "AB" after the character string "123", and the host receives "123AB" .

**Note:** The total length of the custom suffix string cannot exceed 5 characters.

### 5.7.1 Allow / prohibit adding custom suffix



Allow Custom Suffix

\$>:S08084E.<\$



Prohibit Custom Suffix

\$>:S08004E.<\$

(Default)

### 5.7.2 Setting Custom Suffix



Setting Custom Suffix

\$>:R0005B5.<\$

**Example: Setting custom prefix is "CODE" (Hexadecimal value is 0x43/0x4F/0x44/0x45)**

- 1) Scan code "Enter setup"
- 2) Scan code "Setting Custom Suffix"
- 3) Scan [Data code](#): "4" "3" "4" "F" "4" "4" "4" "5" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "Allow Custom Cuffix"
- 6) Scan code "Exit setup"



Exit setup



Enter setup

## 5.8 Suffix

The suffix (such as carriage return, line feed) marks the end of a complete data message. The suffix must be the last content when a piece of data is sent, and there will be no additional data after that.

**Note:** The total length of the terminator suffix string cannot exceed 5 characters.

### 5.8.1 Enable / Disable Suffix



Enable suffix

`$>:S10104E.<$`

(Default)



Disable suffix

`$>:S10004E.<$`



Exit setup



Enter setup

Scanning the following setting codes can you quickly set the terminator as 0x0D (carriage return) or 0x0D, 0x0A (carriage Linefeed) or 0x09 (Tab), and allow adding terminator to send.



Set suffix

\$>:R000655.<\$



Set suffix 0x0D

\$>:DEFXXC3.<\$

(Default)



Set suffix 0x0D,0x0A

\$>:DEFXXC4.<\$



Set suffix 0x09

\$>:DEFXXC5.<\$

Users can also customize the terminator suffix: First scan "Set suffix", then scan the hexadecimal value of the terminator suffix to be set in sequence, at last, scan "**Save**".

**Note:** The total length of the terminator suffix string cannot exceed 5 characters.

#### **Example: Setting Custom suffix is 0x0A**

- 1) Scan code "Enter setup"
- 2) Scan code "Set suffix"
- 3) Scan [Data code](#): "0"A"(in Appdendix)
- 4) Scan code "Save"(in Appdendix)
- 5) Scan code "Enable suffix "
- 6) Scan code "Exit setup"




Exit setup



Enter setup

## 5.9 Field Interception

Field interception refers to the secondary editing of the scanned code result. Assuming that the scan code result data contains a total length of K bytes, the first segment is M bytes and the latter segment is N bytes. The value range of M and N is 0-255.

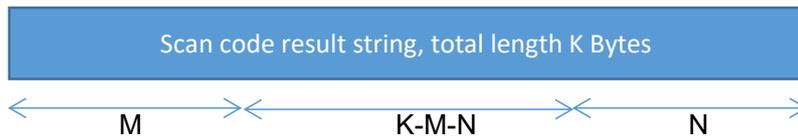

Interception method and effect

- Keep origin
- Reserve Front part M bytes setting
- Reserve Back part N bytes setting
- Reserve K-M-N bytes in the middle section

If you want to hide the front bytes, N is set to 0, keep the middle, that is, K-M-0

If you want to hide the back bytes, set M to 0 and keep the middle, ie K-0-N



Keep only the front part  
\$>:S180882.<\$



Keep only the back part  
\$>:S181082.<\$  
(Default)



Keep only the middle section  
\$>:S181882.<\$



Keep origin  
\$>:S180082.<\$  
(Default)

For the setting of the M bytes in the front part and the N bytes in the back part, the set length is 0-255, that is, 0x00-0xFF.

For example, to set the M bytes to 18, the corresponding ASCII hexadecimal value is 12, first scan the "Front part M bytes setting", then the date "1" and "2" respectively, and then scan code "save".



Front part M bytes setting  
\$>:R000831.<\$



Back part N bytes setting  
\$>:R000841.<\$



Exit setup



Enter setup

## 5.10 GS Character Conversion

GS character conversion refers to replacing the 0x1D contained in the content with the specified ASCII character.

### 5.10.1 Enable/ Disable GS character conversion



Enable GS characters conversion

\$>:S010181.<\$



Disable GS characters conversion

\$>:S010081.<\$

(Default)

### 5.10.2 Set GS Character conversion



Set GS Conversion

\$>:R0006A6.<\$

**Example: Set the GS conversion to “####” (The hexadecimal value is 0x23/0x23/0x23/0x23)**

- 1) Scan code “Enter setup”
- 2) Scan code “Set GS conversion ”
- 3) Scan [Data code](#): “2”“3”“2”“3”“2”“3”“2”“3”(in Appdendix)
- 4) Scan code "Save "(in Appdendix)
- 5) Scan code "Enable GS characters conversion"
- 6) Scan code "Exit setup"



Exit setup



Enter setup

### 5.10.3 Quick Setting Code for Special GS Conversion

Including four substitutions: “[GS]”, “(GS)”, “<GS>” “GS”



\$>:SHTCT04.<\$  
GS



\$>:SHTCT05.<\$  
<GS>



\$>:SHTCT06.<\$  
(GS)



\$>:SHTCT07.<\$  
[GS]



\$>:SHTCT08.<\$  
'GS'



\$>:SHTCT09.<\$  
`GS`



\$>:SHTCT0A.<\$  
|



\$>:SHTCT0B.<\$  
?



\$>:SHTCT0C.<\$  
\*



\$>:SHTCT0D.<\$  
<0x1D>



Exit setup



Enter setup

## 5.11 Character Replacement

This function is to set an original replacement character and a replaced character. When the running character replacement is turned on, the character replacement is performed before outputting in the keyboard communication mode. If there is a set of transcoding, such as unicode to internal code or internal code to unicode, after the conversion, it is checked whether it is the character to be replaced, and if so, it is replaced with the character to be replaced.



Allow character substitution

\$>:S020281.<\$



Disable character substitution

\$>:S020081.<\$

When setting the original replacement character and the replaced character, it is 2 bytes, with the high order first, that is, xxxxyyyy, xxxx is the original replacement character, and yyyy is the replaced character.

For example, replace the space with a carriage return, that is, 0020000D, 0020 is a space, and 000D is a carriage return.

Refer to the GS character replacement character for the setting procedure.

Replacement character setting code



Character replacement data settings

\$>:R0007D4.<\$



Exit setup



Enter setup

## 5.12 Set NGR Information

After enable sending NGR information, when the decoding times out, the scanner will send user-defined NGR information to the host to determine the reading failure; users can set their own customized content by setting the NGR information. (NGR maximum of 7 characters!)

### 5.12.1 Enable/ Disable Send NGR



Enable Send NGR

\$>:S40404E.<\$



Disable Send NGR

\$>:S40004E.<\$

(Default)

### 5.12.2 Set NGR Information



Set NGR information

\$>: R000767.<\$

**Example: Set NGR information to "FAIL" (hexadecimal value is 0x46/0x41/0x49/0x4C)**

- 1) Scan code "Enter setup"
- 2) Scan code "Set NGR Information"
- 3) Scan [Data code](#): "4" "6" "4" "1" "4" "9" "4" "C" (in Appendix)
- 4) Scan code "Save"(in Appendix))
- 5) Scan code "Enabel Send NGR"
- 6) Scan code "Exit setup"



Exit setup



Enter setup

## 6 Barcode Parameter Settings

### 6.1 Overall Settings

#### 6.1.1 Enable/Disable Reading All Barcodes

Set "Disable all barcode", the scanner cannot read other codes except the setting code



Enable all barcode  
\$>:S010187.<\$



Disable all barcode  
\$>:S010087.<\$

#### 6.1.2 Enable/Disable Reading All 1D Barcodes



Enable all 1D Codes  
\$>:S020287.<\$



Disable all 1D code  
\$>:S020087.<\$

#### 6.1.3 Enable/Disable Reading All 2D Barcodes



Enable all 2D codes  
\$>:S040487.<\$



Disable all 2D codes  
\$>:S040087.<\$

**Note:** CODE128 and QR barcodes mandatorily enabled, all setting codes cannot disable both of them.



Exit setup



Enter setup

---

## 6.1.4 Enable/Disable Reading All 1D/2D Reverse Barcodes



Enable all 1D reverse barcode

[\\$>:S080887.<\\$](#)



Disable all 1D reverse barcode

[\\$>:S080087.<\\$](#)

(Default)



Enable all 2D reverse barcode

[\\$>:S101087.<\\$](#)



Disable all 2D reverse barcode

[\\$>:S100087.<\\$](#)

(Default)



Exit setup



Enter setup

---

## 6.2 Code128/AIM128/EAN128/NL128

### 6.2.1 Enable/Disable



Enable

\$>:S010188.<\$  
(Default)



Disable

\$>:S010088.<\$

### 6.2.2 CODE ID



Set CODE128 CODE ID

\$>: R001342.<\$



Exit setup



Enter setup

### 6.2.3 Length Settings

The user can set the maximum and minimum length of barcode reading. If the length of barcode being read does not match the set effective length, the barcode reading will be unsuccessful, and the scanner will not send the data to the host.

The barcode length is composed of "Minimum length" and "Maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



CODE 128 Maximum decoding length  
\$>: R000C21.<\$



CODE 128 Minimum decoding length  
\$>: R000C31.<\$

#### **Example: Limited the scanner only read minimum 8 characters and maximum 12 characters**

- 1) Scan code "Enter setup"
- 2) Scan code "CODE 128 Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)
- 4) Scan code "Save " (in Appendix)
- 5) Scan code "CODE 128 Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save " (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

---

## 6.2.4 GS1-128 Output Enable



Enable output  
\$>:S202088.<\$



Disable output  
\$>:S200088.<\$  
(Default)

## 6.3 UPC/EAN/ISSN/ISBN

### 6.3.1 Enable/Disable Scan



Enable  
\$>:S010189.<\$  
(Default)



Disable  
\$>:S010089.<\$

### 6.3.2 CODE ID



Set EAN CODE ID  
\$>: R001362.<\$



Exit setup



Enter setup

### 6.3.3 Parity Bits Transmission



EAN8 parity output  
\$>:S0101AA.<\$  
(Default)



EAN8 no parity output  
\$>:S0100AA.<\$



EAN13 parity output  
\$>:S0202AA.<\$  
(Default)



EAN13no parity output  
\$>:S0200AA.<\$



UPCA parity output  
\$>:S0404AA.<\$  
(Default)



UPCA no parity output  
\$>:S0400AA.<\$



UPCE parity output  
\$>:S0808AA.<\$  
(Default)



UPCE no parity output  
\$>:S0800AA.<\$



Exit setup



Enter setup

### 6.3.4 Set Whether to Enable Scan Additional Codes

After setting to "Read 2 digits additional code" or "Read 5 digits additional code", the scanner can read new barcodes composed of ordinary barcodes and additional codes, as well as ordinary barcodes without additional codes. After setting to "not read 2 digit additional code" or " not read 5 digit additional code", the part of the additional code in the new barcode composed of ordinary barcode and additional code will not be read, and the part of the common ordinary barcode can still be read. .



Read 2 digit additional code  
\$>:S101089.<\$  
(Default)



Not read 2 digit additional  
code\$>:S100089.<\$



Read 5 digit additional code  
\$>:S080889.<\$  
(Default)



Not read 2 digit additional code  
\$>:S080089.<\$

### 6.3.5 Set Whether Additional Code is Required

This parameter is only valid when the scanner has been set "Read 2 digit additional code" or "read 5 digit additional code".



With additional code  
\$>:S808089.<\$



No additional code required  
\$>: S800089.<\$  
(Default)



Exit setup



Enter setup

### 6.3.6 Extension Settings

"Barcode information not extended", means keep all original types and data bits;

"Barcode information 8 expand to 13", means expanding the Data Bits of the barcode (add 0 at the prefix), but the barcode type remains.



ENA8 to ENA13 OPEN

\$>:S600089.<\$



ENA8 to ENA13 CLOSE

\$>:S602089.<\$

(Default)



UPCE to UPCA OPEN

\$>:S1010A4.<\$



UPCE to UPCA CLOSE

\$>:S1000A4.<\$

(Default)



UPCA to EAN13 OPEN

\$>:S0301A4.<\$



UPCA to EAN13 CLOSE

\$>:S0300A4.<\$

(Default)



Barcode information 8 expand to 13

\$>:S600089.<\$



Barcode information is not expanded

\$>:S602089.<\$

(Default)



Exit setup



Enter setup

---

## 6.4 Codabar

### 6.4.1 Enable/Disable Scan



Enable

\$>:S01018C.<\$



Disable

\$>:S01008C.<\$

(Default)

### 6.4.2 CODE ID



Set CODABAR CODE ID

\$>: R0013E2.<\$



Exit setup



Enter setup

---

### 6.4.3 Parity

The check digit is not mandatory in the Codabar barcode data. If there is a check digit, it is the last character of the data. The check digit is a value calculated based on all data to check whether the data is correct.

Set to "None parity", the scanner will transmit all barcode data normally.

Set to "Check but not send check digit", the scanner will check according to the last 1 digit of the barcode. If the check is passed, normal data (the check digit excluded) will be transmitted. If the check fails, the barcode reading failure will be prompted.

Set to "Check and send check digit", the scanner will check the last 1 digit of the barcode. If the check is passed, the check digit will be transmitted as the last 1 digit of normal data. If the check fails, the reading failure will be promoted.



None parity

\$>:S02008C.<\$

(Default)



Check but not send check digit

\$>:S06028C.<\$



Exit setup



Enter setup



Check and send check digit

\$>:S06068C.<\$

## 6.4.4 Length Settings

The user can set the maximum and minimum length of barcode reading. If read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



CODABAR Maximum decoding length

\$>: R000C81.<\$



CODABAR Minimum decoding length

\$>: R000C91.<\$

**Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "CODABAR Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)



Exit setup



Enter setup

- 4) Scan code "Save" (in Appendix)
- 5) Scan code "CODABAR Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"

### 6.4.5 Send Start/stop character setting



Not Send start/stop character

\$>:S08088C.<\$

(Default)



Send start/stop character

\$>:S08008C.<\$

#### Start/stop character case setting



Start character Uppercaser

\$>:S20008C.<\$

(Default)



Start character Lowercase

\$>:S20208C.<\$



Exit setup



Enter setup

---

## 6.5 Code 39

### 6.5.1 Enable/Disable Scan



Enable

\$>:S01018A.<\$  
(Default)



Disable

\$>:S01008A.<\$

### 6.5.2 CODE ID



Set CODE39 CODE ID

\$>: R001382.<\$



Exit setup



Enter setup

---

### 6.5.3 Parity

The check digit is not mandatory in the Code 39 barcode data. If there is a check digit, it will be the last character of the data. The check digit is a value calculated based on all data to check whether the data is correct.

Set to "None parity", the scanner will transmit all barcode data normally.

Set to "Check but not send check digit", the scanner will check the barcode according to the last 1 digit of it. If the check is passed, normal data(check digit excluded) will be transmitted. If the check fails, the barcode reading failure will be prompted.

Set to "Check and send check digit", the scanner will check the last 1 digit of the barcode. If the check is passed, the check digit will be transmitted as the last 1 digit of normal data. If the check fails, the barcode reading failure will be prompted.



None parity

\$>:S02008A.<\$

(Default)



Check but not send check digit

\$>:S06028A.<\$



Check and send check digit

\$>:S06068A.<\$



Exit setup

---



Enter setup

---



Exit setup

---



Enter setup

---

## 6.5.4 Expand Support



Enable Expand  
\$>:S08088A.<\$



Disable Expand  
\$>:S08008A.<\$  
(Default)

## 6.5.5 Full ASCII Support



Enable full ascii  
\$>:S20208A.<\$  
(Default)



Disable full ascii  
\$>:S20008A.<\$



Exit setup



Enter setup

## 6.5.6 Length Settings

The user can set the maximum and minimum length of barcode reading. If the read barcode length does not match the preset effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



CODE 39 Maximum decoding length  
\$>: R000C41.<\$



CODE 39 Minimum decoding length  
\$>: R000C51.<\$

**Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes**

- 1) Scan code "Enter setup"
- 2) Scancode "CODE 39 Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "CODE 39 Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

---

### 6.5.7 Send PREFIX Character (A)



Send PREFIX character (A)

\$>:S1010AB.<\$



Not send PREFIX Character

\$>:S1000AB.<\$

(Default)

### 6.5.8 CODE39 Send Leading Character (\*)



CODE39 Send leading

\$>:S2020AB.<\$



CODE39 Don't send Leading

\$>:S2000AB.<\$

(Default)



Exit setup



Enter setup

## 6.6 Code 32

### 6.6.1 Enable/Disable Scan



Enable

\$>:S0101AB.<\$

(Default)



Disable

\$>:S0100AB.<\$

### 6.6.2 CODE ID



Set CODE32 CODE ID

\$>:R001792.<\$

### 6.6.3 Send PREFIX Character (A)



Send PREFIX character (A)

\$>:S1010AB.<\$



Not send PREFIX character

\$>:S1000AB.<\$

(Default)



Exit setup



Enter setup

## 6.6.4 Length Settings

The user can set the maximum and minimum length of barcode reading. If the read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



CODE 32 Maximum decoding length  
\$>:R001181.<\$



CODE 32 Minimum decoding length  
\$>:R001191.<\$

### Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes

- 1) Scan code "Enter setup"
- 2) Scan code "CODE 32 Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "CODE 32 Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

## 6.7 Code 93

### 6.7.1 Enable/Disable Scan



Enable

\$>:S01018D.<\$  
(Default)



Disable

\$>:S01008D.<\$

### 6.7.2 CODE ID



Set CODE93 CODE ID

\$>: R001402.<\$



Exit setup



Enter setup

### 6.7.3 Parity

The check digit is not mandatory in Code 93 barcode data. If there is a check digit, it is the last 2 characters of the data. The check digit is a value calculated based on all data to check whether the data is correct.

Set to "None parity", the scanner will transmit all barcode data normally.

Set to "Check but not send check digit", the scanner will check the barcode according to the last 2 digits of it. If the check is passed, normal data (check digit excluded) will be transmitted. If the check fails, the barcode reading failure will be prompted.

Set to "Check and send check digit", the scanner will check according to the last 2 digits of the bar code. If the check is passed, the check digit will be transmitted together as the last 2 digits of normal data. If the check fails, the barcode reading failure will be prompted.



None parity

\$>:S02008D.<\$

(Default)



Check but not send check digit

\$>:S06028D.<\$



Check and send check digit

\$>:S06068D.<\$



Exit setup



Enter setup

---

## 6.7.4 Full ASCII Support

**Full ASCII:** The representation of all ASCII characters is included in the encoding method of Code 39. Through certain setting, the scanner can support barcodes containing the full ASCII character set.



Enable full ascii  
\$>:S20208D.<\$  
(Default)



Disable full ascii  
\$>:S20008D.<\$



Exit setup



Enter setup

## 6.7.5 Length Settings

The user can set the maximum and minimum length of barcode reading. If read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



CODE 93 Maximum decoding length

\$>: R000CA1.<\$



CODE 93 Minimum decoding length

\$>: R000CB1.<\$

**Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "CODE 93 Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "CODE 93 Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

## 6.8 Code 11

### 6.8.1 Enable/Disable Scan



Enable

\$>:S01018F.<\$



Disable

\$>:S01008F.<\$

(Default)

### 6.8.2 CODE ID



Set CODE11 CODE ID

\$>: R001442.<\$



Exit setup



Enter setup

### 6.8.3 Parity

The check digit is not mandatory in Code 11 barcode data. If there is a check digit, it is the last 1 or 2 characters of the data. The check digit is a value calculated based on all data to check whether the data is correct.

Set to "None parity", the scanner will transmit all barcode data normally.



None parity

\$>:S02008F.<\$

(Default)



2 parity bits

\$>:S08088F.<\$



1 parity bit

\$>:S08008F.<\$



Check but not send check digit

\$>:S06028F.<\$



Check and send check digit

\$>:S06068F.<\$



Exit setup



Enter setup

## 6.8.4 Length Settings

The user can set the maximum and minimum length of barcode reading. If the read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



CODE 11 Maximum decoding length  
\$>: R000CE1.<\$



CODE 11 Minimum decoding length  
\$>: R000CF1.<\$

**Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "CODE 11 Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "CODE 11 Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

## 6.9 ITF-25/ITF-14/ITF-6/

## Deutsche12/

### Deutsche14

#### 6.9.1 Enable/Disable



Enable

\$>:S01018B.<\$

(Default)



Disable

\$>:S01008B.<\$

#### 6.9.2 CODE ID



Set ITF CODE ID

\$>: R0013C2.<\$



Exit setup



Enter setup

---

### 6.9.3 Parity

Interleaved 2 of 5 barcode data is not mandatory to include a check digit. If there is a check digit, it is the last character of the data. The check digit is a value calculated based on all data to verify whether the data is correct.

Set to "None parity", the scanner will transmit all barcode data normally.

Set to "Check but not send check digit", the scanner will check the last 1 digit of the barcode. If the check is passed, the normal data (the check digit excluded) will be transmitted. If the check fails, the barcode reading failure will be prompted.

Set to "Check and send check digit", the scanner will check the last 1 digit of the barcode. If the check is passed, the check digit will be transmitted as the last 1 digit of normal data. If the check fails, the barcode reading failure will be prompted.



None parity

\$>:S02008B.<\$

(Default)



Check but not send check digit

\$>:S06028B.<\$



Check and send check digit

\$>:S06068B.<\$



Exit setup



Enter setup

## 6.9.4 Length Setting

The user can set the maximum and minimum length of barcode reading. If read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



ITF Maximum decoding length  
\$>: R000C61.<\$



ITF Minimum decoding length  
\$>: R000C71.<\$

**Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "ITF Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "ITF Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

---

## 6.10 Industrial 25

### 6.10.1 Enable/Disable Scan



Enable

\$>:S010193.<\$



Disable

\$>:S010093.<\$

(Default)

### 6.10.2 CODE ID



Set INDUSTRIAL 25 CODE ID

\$>: R0014E2.<\$



Exit setup



Enter setup

### 6.10.3 Parity

The check digit is not mandatory in the Industrial 25 barcode data. If there is a check digit, it is the last character of the data. The check digit is a value calculated based on all data to check whether the data is correct.

Set to "None parity", the scanner will transmit all barcode data normally.

Set to "Check but not send check digit", the scanner will check according to the last 1 digit of the barcode. If the check is passed, the normal data (the check digit excluded) will be transmitted. If the check fails, the barcode reading failure will be prompted.

Set to "Check and send check digit", the scanner will check the last 1 digit of the barcode. If the check is passed, the check digit will be transmitted as the last 1 digit of normal data. If the check fails, the barcode reading failure will be prompted.



None parity

\$>:S020093.<\$

(Default)



Check but not send check digit

\$>:S060293.<\$



Check and send check digit

\$>:S060693.<\$



Exit setup



Enter setup

## 6.10.4 Length Settings

The user can set the maximum and minimum length of barcode reading. If the read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



INDUSTRIAL 25 Maximum decoding  
length  
\$>: R000D41.<\$



INDUSTRIAL 25 Minimum decoding  
length  
\$>: R000D51.<\$

### Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes

- 1) Scan code "Enter setup"
- 2) Scan code "INDUSTRIAL 25 Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "INDUSTRIAL 25 Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

---

## 6.11 Matrix 25

### 6.11.1 Enable/Disable scan



Enable

\$>:S01018E.<\$



Disable

\$>:S01008E.<\$  
(Default)

### 6.11.2 CODE ID



Set MATRIX25 CODE ID

\$>: R001422.<\$



Exit setup



Enter setup

---

### 6.11.3 Parity



None parity  
\$>:S02008E.<\$  
( Default )



Check but not send check digit  
\$>:S06028E.<\$



Check and send check digit  
\$>:S06068E.<\$



Exit setup



Enter setup

## 6.11.4 Length Settings

The user can set the maximum and minimum length of barcode reading. If read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



Matrix25 Maximum decoding length  
\$>: R000CC1.<\$



Matrix25 Minimum decoding length  
\$>: R000CD1.<\$

**Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "Matrix25 Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "Matrix25 Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

## 6.12 NEC 25 /Japan Matrix 25

### 6.12.1 Enable/Disable Scan



Enable

\$>:S01019E.<\$



Disable

\$>:S01009E.<\$  
(Default)

### 6.12.2 CODE ID



NEC25 CODE ID setting

\$>: R001642.<\$



Exit setup



Enter setup

---

## 6.12.3 Parity



None parity  
\$>:S02009E.<\$  
( Default )



Check but not send check digit  
\$>:S06029E.<\$



Check and send check digit  
\$>:S06069E.<\$



Exit setup



Enter setup

## 6.12.4 Length Settings

The user can set the maximum and minimum length of barcode reading. If read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode this length is supported.



NEC25 Maximum decoding length  
\$>: R000FE2.<\$



NEC25 Minimum decoding length  
\$>: R001002.<\$

**Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "NEC25 Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "NEC25 Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

## 6.13 Standard 25

### 6.13.1 Enable/Disable Scan



Enable

\$>:S010192.<\$



Disable

\$>:S010092.<\$

(Default)

### 6.13.2 CODE ID



Set STANDARD 25 CODE ID

\$>: R0014A2.<\$



Exit setup



Enter setup

### 6.13.3 Parity

Standard 25 barcode data is not mandatory to include a check digit. If there is a check digit, it is the last character of the data. The check digit is a value calculated based on all data to check whether the data is correct.

Set to "None parity", the scanner will transmit all barcode data normally.

Set to "Check but not send check digit", the scanner will check according to the last 1 digit of the barcode. If the check is passed, the normal data (check digit excluded) will be transmitted. If the check fails, the barcode reading failure will be prompted.

Set to "Check and send check digit", the scanner will check the last 1 digit of the barcode. If the check is passed, the check digit will be transmitted as the last 1 digit of normal data. If the check fails, the barcode reading failure will be prompted.



None parity

\$>:S020092.<\$

(Default)



Check but not send check digit

\$>:S060292.<\$



Check and send check digit

\$>:S060692.<\$



Exit setup



Enter setup

## 6.13.4 Length Settings

The user can set the maximum and minimum length of barcode reading. If read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, the barcode only recognizes the two lengths of Scan. If the maximum length is equal to the minimum length, only barcode of this length is supported.



STANDARD 25 Maximum decoding  
length  
\$>: R000D21.<\$



STANDARD 25 Minimum decoding length  
\$>: R000D31.<\$

**Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "STANDARD 25 Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "STANDARD 25 Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

---

## 6.14 Data Logic 25

### 6.14.1 Enable/Disable scan



Enable

\$>:S01019F.<\$



Disable

\$>:S01009F.<\$

(Default)

### 6.14.2 CODE ID



Set DataLogic25 CODE ID

\$>: R001692.<\$



Exit setup



Enter setup

---

### 6.14.3 Parity



None parity  
\$>:S02009F.<\$  
(Default)



Check but not send check digit  
\$>:S06029F.<\$



Check and send check digit  
\$>:S06069F.<\$



Exit setup



Enter setup

## 6.14.4 Length Settings

The user can set the maximum and minimum length of barcode reading. If read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



Data Logic 25 Maximum decoding length  
\$>: R001022.<\$



Data Logic 25 Minimum decoding length  
\$>: R001042.<\$

### **Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "Data Logic 25 Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "Data Logic 25 Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

---

## 6.15 MSI-Plessey

### 6.15.1 Enable/Disable Scan



Enable MSI-Plessey

\$>:S010191.<\$



Disable

\$>:S010091.<\$

(Default) default

### 6.15.2 CODE ID



Set MSI PLESSEY ID

\$>: R001482.<\$



Exit setup



Enter setup

### 6.15.3 Parity

The check digit is not mandatory in the MSI-Plessey barcode data. If there is a check digit, it is the last 1 or 2 characters of the data. The check digit is a value calculated based on all data to verify whether the data is correct.

Set to "None Check", the reader will transmit all barcode data normally.



None parityDisable  
\$>:S020191.<\$



MOD10 One Check Character  
\$>:S180091.<\$  
(Default) default



MOD10/11 Check Character  
\$>:S180891.<\$



MOD10/10 Check Character  
\$>:S181091.<\$



Not Send MIS-Plessey Check Character  
\$>:S060291.<\$  
(Default) Default



Send and Check MIS-Plessey Check  
Character  
\$>:S060691.<\$



Exit setup



Enter setup

## 6.15.4 Lengths Settings

The user can set the maximum and minimum length of barcode reading. If the read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



MSI\_Plessey Maximum decoding length

\$>: R000D01.<\$



MSI\_Plessey Minimum decoding Length

\$>: R000D11.<\$

**Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "MSI\_Plessey Minimum decoding Length"
- 3) Scan [Date code](#) "8" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "MSI\_Plessey Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

---

## 6.16 Plessey

### 6.16.1 Enable/Disable Plessey Scan



Enable Plessey  
\$>:S0101A0.<\$



Disable Plessey  
\$>:S0100A0.<\$  
(Default)

### 6.16.2 CODE ID



Set Plessey CODE ID  
\$>: R0016F2.<\$



Exit setup



Enter setup

### 6.16.3 Lengths Settings

The user can set the maximum and minimum length of barcode reading. If read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only this length is supported.



Plessey Maximum decoding length  
\$>: R001062.<\$



Plessey Minimum decoding length  
\$>: R001082.<\$

#### **Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "Plessey Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "Plessey Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

## 6.17 RSS-EXP /RSS\_14/GS1 Data

### 6.17.1 Enable/Disable RSS-EXP /RSS\_14/GS1 Data



Enable RSS14  
\$>:S010190.<\$



Disable RSS14  
\$>:S010090.<\$  
(Default)

### 6.17.2 Enable/Disable RSS14 LIMIT



Enable RSS14 LIMIT  
\$>:S0101A6.<\$



Disable RSS14 LIMIT  
\$>:S0100A6.<\$  
(Default)

### 6.17.3 Enable/Disable RSS14\_STACK



Enable RSS14\_STACK  
\$>:S0101A7.<\$



Disable RSS14\_STACK  
\$>:S0100A7.<\$  
(Default)



Exit setup



Enter setup

---

## 6.17.4 Enable / Disable RSS EXPANDED



Enable RSS EXPANDED  
\$>:S0101A8.<\$



Disable RSS EXPANDED  
\$>:S0100A8.<\$  
(Default)

## 6.17.5 Enable/Disable RSS EXPANDED STACK



Enable EXPANDED STACK  
\$>:S0101A9.<\$



Disable EXPANDED STACK  
\$>:S0100A9.<\$  
(Default)

## 6.17.6 CODE ID



Set RSS GSICODE ID  
\$>: R001462.<\$



Exit setup



Enter setup

---

## 6.18 Telepen

### 6.18.1 Enable/Disable Telepen



Enable Telepen  
\$>:S010194.<\$



Disable Telepen  
\$>:S010094.<\$  
(Default)

### 6.18.2 CODE ID



Set TELEPEN CODE ID  
\$>: R0014C2.<\$



Exit setup



Enter setup

### 6.18.3 Lengths Settings

The user can set the maximum and minimum length of barcode reading. If read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



TELEPEN Maximum decoding length

\$>: R000D61.<\$



TELEPEN Minimum decoding length

\$>: R000D71.<\$

**Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes**

- 1) Scan code "Enter Setup"
- 2) Scan code "Telepen Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)
- 4) Scan code "Save" in Appendix)
- 5) Scan code "Telepen Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

---

## 6.19 Pharma Code One-Track

### 6.19.1 Enable/Disable Pharma Code One-Track



Enable Pharma-one

\$>:S0101A1.<\$



Disable Pharma-one

\$>:S0100A1.<\$

(Default)

### 6.19.2 CODE ID



Set Pharma\_One CODE ID

\$>: R001712.<\$



Exit setup



Enter setup

### 6.19.3 Lengths Settings

The user can set the maximum and minimum length of barcode reading. If the read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only this length is supported.



Pharma\_One Maximum decoding length

\$>: R0010A2.<\$



Pharma\_One Minimum decoding length

\$>: R0010C2.<\$

**Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes**

- 1) Scan code "Enter Setup"
- 2) Scan code "Pharma\_One Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "Pharma\_One Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

---

## 6.20 PharmaCode Two-Track

### 6.20.1 Enable/Disable PharmaCode Two-Track



Enable

\$>:S0101A2.<\$



Disable

\$>:S0100A2.<\$

(Default)

### 6.20.2 CODE ID setting



Set Pharma\_Two CODE ID

\$>: R001732.<\$



Exit setup



Enter setup

### 6.20.3 Lengths Settings

The user can set the maximum and minimum length of barcode reading. If read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



Pharma\_Two Maximum decoding length

\$>: R0010E2.<\$



Pharma\_Two Minimum decoding length

\$>: R001102.<\$

**Example: Limit the scanner to only read barcodes with a minimum of 8 bytes and a maximum of 12 bytes**

- 1) Scan code " Enter setup"
- 2) Scan code "Pharma\_Two Minimum decoding length"
- 3) Scan [Data code](#) "8" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "Pharma\_Two Maximum decoding length"
- 6) Scan [Data code](#) "C" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

## 6.21 AZTEC

### 6.21.1 Enable/Disable AZTEC



Enable AZTEC  
\$>:S01019A.<\$



Disable AZTEC  
\$>:S01009A.<\$  
(Default)

### 6.21.2 Enable/Disable reverse



Disable Reverse  
\$>:S40009A.<\$  
(Default)



Enable Reverse  
\$>:S40409A.<\$  
(Default)

### 6.21.3 CODE ID



Set AZTEC CODE ID  
\$>: R0015E2.<\$



Exit setup



Enter setup

## 6.21.4 Lengths Settings

The user can set the maximum and minimum length of barcode reading. If the barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host. The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported



AZTEC Maximum decoding length

\$>: R000ED2.<\$



AZTEC Minimum decoding length

\$>: R000F02.<\$

**Example: Restrict the scanner to only read barcodes with a minimum of 4 bytes and a maximum of 100 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "AZTEC Minimum decoding length"
- 3) Scan [Data code](#) "4" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "AZTEC Maximum decoding length"
- 6) Scan [Data code](#): "6" "4" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

---

## 6.22 CODABLOCK A

### 6.22.1 Enable/Disable CODABLOCK A



Enable

\$>:S01019C.<\$



Disable

\$>:S01009C.<\$

(Default)

### 6.22.2 CODE ID



Set CodaBlock\_A CODE ID

\$>: R001602.<\$



Exit setup



Enter setup

### 6.22.3 Length Settings

The user can set the maximum and minimum length of barcode reading. If read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only this length is supported.



CodaBlock A Maximum decoding length  
\$>: R000F62.<\$



CodaBlock A Minimum decoding length  
\$>: R000F82.<\$

#### **Example: Restrict the scanner to only read barcodes with a minimum of 4 bytes and a maximum of 100 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "CodaBlock A Minimum decoding length"
- 3) Scan [Data code](#) "4" (in Appendix)
- 4) Scan code "Save " (in Appendix)
- 5) Scan code "CodaBlock A Maximum decoding length"
- 6) Scan [Data code](#): "6" "4" (in Appendix)
- 7) Scan code "Save " (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

---

## 6.23 CODABLOCK F

### 6.23.1 Enable/Disable CODABLOCK F



Enable

\$>:S01019D.<\$



Disable

\$>:S01009D.<\$

(Default)

### 6.23.2 CODE ID



Set CodaBlock\_F CODE ID

\$>: R001622.<\$



Exit setup



Enter setup

### 6.23.3 Length Settings

The user can set the maximum and minimum length of barcode reading. If read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



CodaBlock F Maximum decoding length

\$>: R000FA2.<\$



CodaBlock F Minimum decoding length

\$>: R000FC2.<\$

#### **Example: Restrict the scanner to only read barcodes with a minimum of 4 bytes and a maximum of 100 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "CodaBlock F Minimum decoding length"
- 3) Scan [Data code](#) "4" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "CodaBlock F Maximum decoding length"
- 6) Scan [Data code](#): "6" "4" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

## 6.24 Data Matrix

### 6.24.1 Enable/Disable Data Matrix



Enable

\$>:S010197.<\$

(Default)



Disable

\$>:S010097.<\$

(Default)

### 6.24.2 Enable/Disable reverse



Enable

\$>:S020297.<\$

(Default)



Disable

\$>:S020097.<\$

### 6.24.3 CODE ID



Set DATA MATRIX CODE ID

\$>: R001582.<\$



Exit setup



Enter setup

---

## 6.24.4 Length Settings

The user can set the maximum and minimum length of barcode reading. If read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



Data Matrix Maximum decoding length  
\$>: R000E12.<\$



Data Matrix Minimum decoding length  
\$>: R000E32.<\$

### **Example: Restrict the scanner to only read barcodes with a minimum of 4 bytes and a maximum of 100 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "Data Matrix Minimum decoding length"
- 3) Scan [Data code](#) "4" (in Appendix)
- 4) Scan "Save code" (in Appendix)
- 5) Scan code "Data Matrix Maximum decoding length"
- 6) Scan [Data code](#): "6" "4" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

---

## 6.24.5 GS1\_DM Output Enable



Enable

\$>:S202097.<\$



Disable

\$>:S200097.<\$

(Default)

## 6.25 MaxiCode

### 6.25.1 Enable/Disable Maxi Code



Enable

\$>:S010199.<\$



Disable

\$>:S010099.<\$

(Default)

### 6.25.2 CODE ID



Set MAXI CODE ID

\$>: R0015C2.<\$



Exit setup



Enter setup

### 6.25.3 Length Settings

The user can set the maximum and minimum length of barcode reading. If read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



MAXI Maximum decoding length  
\$>: R000E92.<\$



MAXI Minimum decoding length  
\$>: R000EB2.<\$

#### **Example: Restrict the scanner to only read barcodes with a minimum of 4 bytes and a maximum of 100 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "MAXI Minimum decoding length"
- 3) Scan [Data code](#) "4" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "MAXI Maximum decoding length"
- 6) Scan [Data code](#) "6" "4" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

## 6.26 PDF417

### 6.26.1 Enable/Disable PDF417



Enable  
\$>:S010195.<\$  
(Default)



Disable  
\$>:S010095.<\$

### 6.26.2 Enable/Disable reverse



Enable reverse  
[\\$>:S020295.<\\$](#)  
(Default)



Disable reverse  
[\\$>:S020095.<\\$](#)

### 6.26.3 CODE ID



Set PDF417 CODE ID  
\$>: R001522.<\$



Exit setup



Enter setup

## 6.26.4 Length Settings

The user can set the maximum and minimum length of the barcode scan. If read barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



PDF417 Maximum decoding length  
\$>: R000D82.<\$



PDF417 Minimum decoding length  
\$>: R000DA2.<\$

### **Example: Restrict the scanner to only read barcodes with a minimum of 4 bytes and a maximum of 100 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "PDF417 Minimum decoding length"
- 3) Scan [Data code](#) "4" (in Appendix)
- 4) Scan code "Save " (in Appendix)
- 5) Scan code "PDF417 Maximum decoding length"
- 6) Scan [Data code](#) "6" "4" (in Appendix)
- 7) Scan code "Save " (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

---

## 6.27 Micro PDF

### 6.27.1 Enable/Disable Micro PDF



Enable

\$>:S0101A3.<\$



Disable

\$>:S0100A3.<\$

(Default)

### 6.27.2 Enable/Disable Reverse



Disable Reverse

\$>:S4000A3.<\$

(Default)



Enable Reverse

\$>:S4040A3.<\$

### 6.27.3 CODE ID



Set Micro\_PDF CODE ID

\$>: R001752.<\$



Exit setup



Enter setup

## 6.27.4 Length Settings

The user can set the maximum and minimum length of the barcode scan. If the length of the barcode taken by Scan does not match the effective length set, the Scan code is unsuccessful, and the scanner will not send the content of the barcode to the host.

Scan barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, the barcode only recognizes the two lengths of Scan. If the maximum length is equal to the minimum length, only barcode of this length is supported.



Micro PDF Maximum decoding length  
\$>: R001122.<\$



Micro PDF Minimum decoding length  
\$>: R001142.<\$

**Example: Restrict the scanner to only read barcodes with a minimum of 4 bytes and a maximum of 100 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "Micro PDF Minimum decoding length"
- 3) Scan [Data code](#) "4" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "Micro PDF Maximum decoding length"
- 6) Scan [Data code](#): "6" "4" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

## 6.28 QR Code

### 6.28.1 Enable/Disable Scan QR Code

QR CODE Default Fixed on, so reading is without enable or disable



Fixed on  
\$>:S010196.<\$

### 6.28.2 Enable/Disable Reverse



Enable Reverse  
[\\$>:S020296.<\\$](#)  
(Default)



Disable Reverse  
[\\$>:S020096.<\\$](#)

### 6.28.3 CODE ID



Set QR CODE ID  
\$>: R001562.<\$



Exit setup



Enter setup

## 6.28.4 Length Settings

The user can set the maximum and minimum length of barcode reading. If the barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



QR Maximum decoding length  
\$>: R000DC2.<\$



QR Maximum decoding length  
\$>: R000DF2.<\$

**Example: Restrict the scanner to only read barcodes with a minimum of 4 bytes and a maximum of 100 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "QR Minimum decoding length"
- 3) Scan [Data code](#) "4" (in Appendix)
- 4) Scan code "Save code" (in Appendix)
- 5) Scan code "QR Maximum decoding length"
- 6) Scan [Data code](#): "6" "4" (in Appendix)
- 7) Scan code "Save code" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

## 6.29 Micro QR

### 6.29.1 Enable/Disable Scan Micro QR



Enable

\$>:S010198.<\$



Disable

\$>:S010098.<\$

(Default)

### 6.29.2 Enable/Disable Reverse



Disable reverse

\$>:S400098.<\$

(Default)



Enable reverse

\$>:S404098.<\$

### 6.29.3 CODE ID



Set MICRO QR CODE ID

\$>: R0015A2.<\$



Exit setup



Enter setup

## 6.29.4 Length Settings

The user can set the maximum and minimum length of barcode reading. If the barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



MICRO QR Maximum decoding length  
\$>: R000E52.<\$



MICRO QR Minimum decoding length  
\$>: R000E72.<\$

### Example: Restrict the scanner to only read barcodes with a minimum of 4 bytes and a maximum of 20 bytes

- 1) Scan code "Enter setup"
- 2) Scan code "Micro QR Minimum decoding length"
- 3) Scan [Data code](#) "4" (in Appendix)
- 4) Scan code "Save" (in Appendix)
- 5) Scan code "Micro QR Maximum decoding length"
- 6) Scan [Data code](#): "1" "4" (in Appendix)
- 7) Scan code "Save" (in Appendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

## 6.30 Han Xin Code

### 6.30.1 Enable/Disable Reading Han Xin Code



Enable

\$>:S01019B.<\$



Disable

\$>:S01009B.<\$

(Default)

### 6.30.2 Enable/Disable Reverse



Disable Reverse

\$>:S02009B.<\$

(Default)



Enable Reverse

\$>:S02029B.<\$

### 6.30.3 CODE ID



Set Hanxin CODE ID

\$>: R001772.<\$



Exit setup



Enter setup

## 6.30.4 Length Settings

The user can set the maximum and minimum length of barcode reading. If the barcode length does not match the set effective length, the barcode reading is unsuccessful, and the scanner will not send the barcode content to the host.

The barcode length is composed of "minimum length" and "maximum length". If the maximum length is less than the minimum length, only barcodes of these two lengths can be read. If the maximum length is equal to the minimum length, only barcode of this length is supported.



HANXIN Maximum decoding length  
\$>: R000F22.<\$



HANXIN Minimum decoding length  
\$>: R000F42.<\$

### **Example: Restrict the scanner to only read barcodes with a minimum of 4 bytes and a maximum of 100 bytes**

- 1) Scan code "Enter setup"
- 2) Scan code "HANXI Mnimum decoding length"
- 3) Scan [Data code](#) "4"(in Appdendix)
- 4) Scan code "Save"(in Appdendix)
- 5) Scan code "HANXIN Maximum decoding length"
- 6) Scan [Data code](#): "6" "4"(in Appdendix)
- 7) Scan code "Save "(in Appdendix)
- 8) Scan code "Exit setup"



Exit setup



Enter setup

## 6.31 DOTCODE



Enable

\$>:S0101AE.<\$



Disable

\$>:S0100AE.<\$

(Default)

## 6.32 OCR



Allow ID card reading

\$>:S0101AC.<\$



Prohibit ID card reading

\$>:S0100AC.<\$

(默认)



Allow passport reading

\$>:S0202AC.<\$



Prohibit passport reading

\$>:S0200AC.<\$



Exit setup



Enter setup

## 7 Batch Processing

When multiple settings are required on the scanner, it may be cumbersome to set one by one. At this time, we can save all the information that needs to be set as a barcode information, and the device can complete multiple settings after reading this barcode.

The following are the guidelines for batch processing:

1. The format of each command in the batch command is command + parameter.
2. The command ends with a semicolon. Note that there can be no spaces between each command.
3. Make the command into a QR code in the coding software.
4. The batch command starts with `$>:BATCHST.<$` and ends with `$>:BATCHET.<$`

**Note** :The batch instruction cannot contain data code. Where data codes are needed, specify them by using command + parameters.

For example: Set [Set Custom Prefix] to [A], it will be expressed as follows in batch processing: `$>:R000505.<$41;`

classification	instruction	parameter	=CONCATENATE(B3,C3)	Necessity
Start instruction	<code>\$&gt;:BATCHST.&lt;\$</code>		<code>\$&gt;:BATCHST.&lt;\$</code>	Must indicate that the batch instruction starts
Open barcode	<code>\$&gt;:S01010F.&lt;\$</code>		<code>\$&gt;:S01010F.&lt;\$;</code>	
All types of prefixes and suffixes are allowed	<code>\$&gt;:S80804E.&lt;\$</code>		<code>\$&gt;:S80804E.&lt;\$;</code>	
Allow adding custom prefixes	<code>\$&gt;:S04044E.&lt;\$</code>		<code>\$&gt;:S04044E.&lt;\$;</code>	
Set custom prefix	<code>\$&gt;:R000505.&lt;\$</code>	41	<code>\$&gt;:R000505.&lt;\$41;</code>	
Close barcode	<code>\$&gt;:S01000F.&lt;\$</code>		<code>\$&gt;:S01000F.&lt;\$;</code>	
End of instruction	<code>\$&gt;:BATCHET.&lt;\$</code>		<code>\$&gt;:BATCHET.&lt;\$;</code>	Must indicate that the batch instruction ends



Exit setup



Enter setup

---

The synthetic instructions are as follows:

**\$>:BATCHST.<\$>:S01010F.<\$;\$>:S80804E.<\$;\$>:S04044E.<\$;\$>:R000505.<\$41;  
\$>:S01000F.<\$;\$>:BATCHET.<\$;**



Exit setup



Enter setup

## 8 Appendix

### 8.1 System Default Setting Table

Parameter Name		Default setting	Remark
<b>System settings</b>			
Barcode function		Off	
Barcode information		Not send	
Scan mode		Single mode	
Single mode	Single read time	3000ms	
Continuous mode	Single read time	3000ms	
	Read interval time	1000ms	
Trigger mode		Default (Command +Key)	Commands and keys are always on
Sensitivity mode		High	
Sleep mode		Disabled	
Sleep time		5000ms	
Reading Success Tips		Enabled	
Reading success VF		Medium	
Reading success tips time		80ms	
Reading success LED		Enabled	
On beeper		Enabled	
Indicate month		Beeper	
Illumination		Read code on	
Aim light		Read code on	



Exit setup



Enter setup

Parameter Name	Default setting	Remark
<b>Interface setting</b>		
Interface	USB HID-KBW	
USB	Button delay time	Button not delay time
	Country/keyboard language	U.S.A keyboard
	HID Send Mode	Send Original data
Rs232	Baud rate	9600
	Parity Bit	None parity
	Data Bits	8bits

Parameter Name	Default setting	Remark
<b>Data format setting</b>		
Enable all Prefix and Suffix	ON	
Set Prefix steps	CODEID+Custom +AIMID	
Add custom prefix	Off	Up to prefix 10 characters
Add AIMID prefix	Off	]Cm
Add CODE ID prefix	Off	1or2 characters, uppercase or lowercase
Add Custom suffix	Off	Max suffix 5 characters
Add End suffix	On--0x0D	Enabled , Enter
NGR Information	Not send	
Scan code customization	Non	
Invoice	Off	Only supports national invoice assistant



Exit setup



Enter setup

## 8.2 Barcode Default Setting Table

Parameter Name	Default Setting	Remark
All reverse code	Disabled	
All reverse 2D code	Enabled	
<b>Code128/AIM128/EAN128/NL128</b>		
Enable	On	
Minimum length	2	
Maximum length	80	
<b>UPC/EAN/ISSN/ISBN</b>		
Enable	On	
2 bits additional code	read	
5 bits additional code	Read	
Must have additional code	Not required	
Extended to 13 bits	Not extended	
<b>CODABAR</b>		
Enable	On	
Parity	OFF	OFF:According to the bar code content, if the bar code contains check, send check; do not contain check, do not send; ON: At this point, the check bit will be used to check the decoded data, send or not according to the sending switch decision
Minimum length	5	
Maximum length	60	
<b>CODE39</b>		
Enable	On	



Exit setup



Enter setup

Parameter Name	Default Setting	Remark
Parity	OFF	
Support extension	OFF	
Support Full ASCII	On	
Minimum length	1	
Maximum length	50	
<b>CODE 93</b>		
Enable	On	
Parity	OFF	
Minimum length	5	
Maximum length	60	
<b>CODE 11</b>		
Enable	OFF	
Parity	OFF	
Minimum length	1	
Maximum length	80	
<b>ITF-25/ITF-14/ITF-6/ Deutsche12/ Deutsche14</b>		
Enable	On	
Parity	OFF	
Minimum length	6	
Maximum length	100	
<b>INDUSTRIAL 25</b>		
Enable	OFF	
Parity	OFF	
Minimum length	1	
Maximum length	80	
<b>MATRIX 25</b>		
Enable	OFF	
Parity	OFF	
Minimum length	6	
Maximum length	80	
<b>Japan Matrix 25/NEC25</b>		
Enable	OFF	
Parity	OFF	



Exit setup



Enter setup

Parameter Name	Default Setting	Remark
Minimum length	1	
Maximum length	80	
<b>STANDARD 25</b>		
Enable	OFF	
Parity	OFF	
Minimum length	1	
Maximum length	80	
<b>DATALOGIC 25</b>		
Enable	OFF	
Parity	OFF	
Minimum length	1	
Maximum length	1024	
<b>MSI_PLESSEY</b>		
Enable	OFF	
Parity	1 Bits Check, MOD10	
Parity character	Not send	
Minimum length	1	
Maximum length	80	
<b>PLESSEY</b>		
Enable	OFF	
Minimum length	1	
Maximum length	80	
<b>RSS-EXP/RSS_14/GS1 Data</b>		
Enable	OFF	
<b>TELEPEN</b>		
Enable	OFF	
Minimum length	1	
Maximum length	80	
<b>PharmaCode One-Track</b>		
Enable	OFF	
Minimum length	1	
Maximum length	80	
<b>PharmaCode Two-Track</b>		



Exit setup



Enter setup

Parameter Name	Default Setting	Remark
Enable	OFF	
Minimum length	1	
Maximum length	80	
<b>AZTEC</b>		
Enable	OFF	
Minimum length	1	
Maximum length	1024	
<b>CODABLOCK A</b>		
Enable	OFF	
Minimum length	1	
Maximum length	1024	
<b>CODABLOCK F</b>		
Enable	OFF	
Minimum length	1	
Maximum length	1024	
<b>DATA MATRIX</b>		
Enable	On	
Reverse	<a href="#">On</a>	
Minimum length	1	
Maximum length	3116	
<b>MAXI</b>		
Enable	OFF	
Minimum length	1	
Maximum length	1024	
<b>PDF417</b>		
Enable	On	
Reverse	<a href="#">On</a>	
Minimum length	1	
Maximum length	2710	
<b>MICRO PDF</b>		
Enable	<a href="#">OFF</a>	
Minimum length	1	
Maximum length	1024	



Exit setup



Enter setup

Parameter Name	Default Setting	Remark
<b>QR</b>		
Enable	On	
Reverse	<a href="#">On</a>	
Minimum length	1	
Maximum length	4096	
<b>MICRO QR</b>		
Enable	<a href="#">OFF</a>	
Minimum length	1	
Maximum length	35	
<b>HANXIN</b>		
Enable	OFF	
Minimum length	1	
Maximum length	1024	



Exit setup



Enter setup

## 8.3 AIM ID List

Barcode types	AIM ID	Instruction
Code128/AIM128/EAN128/NL128	JC0	Common Code 128
UPC/EAN/ISSN/ISBN	JE0	Common EAN data
	JE1	EAN data to add 2 bit additional code
	JE2	EAN data to add 5 bits addition code
Codabar	JF0	Standard data packets, no special processing
	JF1	Used in the management of blood centers in the United States
	JF2	Check and send check characters
	JF4	Check, but do not send check characters
Code 39	JA0	None parity , no Full ASCII expansion. All data sent
	JA1	MOD 43Check, send check characters
	JA3	MOD 43 Check, but do not send check characters
	JA4	Full ASCII expansion, but None parity
	JA5	Expansion , MOD43check , send check characters
	JA7	Expansion , MOD43Check , but do not send check characters
CODE 93	JG0	Common data
Code11	JH0	MOD11Single Character Check, send check characters
	JH1	MOD11/MOD11 double character check, and send check characters
	JH3	Check, but do not send check characters
	JH9	不校验
ITF-25/ITF-14/ITF-6/Deutsche12/Deutsche14	JI0	None parity
	JI1	Check and send check characters
	JI3	Check, but do not send check characters
Industrial 2 of 5	JS0	NON
Matrix 25	JX0	Product specific definitions
	JX1	None parity
	JX2	MOD10Check, send check characters



Exit setup



Enter setup

Barcode types	AIM ID	Instruction
	]X3	MOD11Check, send check characters
Japan Matrix25/NEC25	]Z0	Common data
Standard 25	]Z0	Common data
Datalogic 25	]Z0	Common data
MSI-Plessey	]M0	MOD10Check, send check characters
	]M1	MOD10Check, but do not send check characters
	]M8	Tow parity
	]M9	Non Parity
Plessey	]P0	Common data
RSS-EXP /RSS_14/GS1	]e0	Common data
Telepen	]B0, ]B1,]B2,]B 4	Common data
PharmaCode One-Track		
PharmaCode Two-Track		
AZTEC	]z0-9,A-C	Common data
CodaBlock A	]Z0	Common data
CodaBlock F	]Z0	Common data
Data Matrix	]d0	ECC00 to ECC140 version
	]d1	<a href="#">ECC200 common version</a>
	]d2	ECC200, FNC1 in No.1 or No.5
	]d3	ECC200, FNC1 in No.2 or No.6
	]d4	ECC200, included ECI data
	]d5	ECC200, FNC in No.1 or No.5, or included ECI data.
	]d6	ECC200, FNC1 in No.2 or No.5 orr Included ECI data
MaxiCode	]U0	Common data
	]U1	Common data
	]U2	Common data
	]U3	Common data
PDF417	]L0	<a href="#">1994PDF417 standard</a>



Exit setup



Enter setup

Barcode types	AIM ID	Instruction
Micro PDF417		
QR	JQ0	Model 1version
	JQ1	2005standard version , no ECI data
	JQ2	2005 standard version , have ECI data
	JQ3	2005standard version , no ECI data, FNC1 in No.1
	JQ4	2005Standard version,have ECI data , FNC1in No.2
	JQ5	2005Standard version , no ECI data, FNC1 in No.1
	JQ6	2005standard, have ECI data, FNC1in No.2
Micro QR	JZ0	Common data
HAN XIN		

## 8.4 CODE ID List

Barcode type	Code ID
Code128/AIM128/EAN128/NL128	j
UPC/EAN/ISSN/ISBN	d
CODABAR	a
CODE 39	b
CODE 93	i
CODE 11	H
ITF-25/ITF-14/ITF-6/ Deutsche12/ Deutsche14	e
Industrial 25	D
MATRIX25	v
Japan Matrix 25/NEC 25	q
Standard 25	s
Datalogic 25	w
MSI-Plessey	m
Plessey	p
RSS-EXP /RSS_14/GS1 Data	y
Telepen	t



Exit setup



Enter setup

Pharma_One	y
Pharma_Two	Y
AZTEC	Z
Codablock A	h
Codablock F	k
Data Matrix	u
Maxi CODE	x
PDF417	r
Micro PDF	R
QR code	s
Micro QR	S
HAN XIN	g



Exit setup



Enter setup

## 8.5 ASCII code

HEX	Decimal base	Character
00	0	NUL (Null char.)
01	1	SOH (Start of Header)
02	2	STX (Start of Text)
03	3	ETX (End of Text)
04	4	EOT (End of Transmission)
05	5	ENQ (Enquiry)
06	6	ACK (Acknowledgment)
07	7	BEL (Bell)
08	8	BS (Backspace)
09	9	HT (Horizontal Tab)
0a	10	LF (Line Feed)
0b	11	VT (Vertical Tab)
0c	12	FF (Form Feed)
0d	13	CR (Carriage Return)
0e	14	SO (Shift Out)
0f	15	SI (Shift In)
10	16	DLE (Data Link Escape)
11	17	DC1 (XON) (Device Control 1)
12	18	DC2 (Device Control 2)
13	19	DC3 (XOFF) (Device Control 3)
14	20	DC4 (Device Control 4)
15	21	NAK (Negative Acknowledgment)
16	22	SYN (Synchronous Idle)
17	23	ETB (End of Trans. Block)
18	24	CAN (Cancel)
19	25	EM (End of Medium)
1a	26	SUB (Substitute)
1b	27	ESC (Escape)
1c	28	FS (File Separator)
1d	29	GS (Group Separator)
1e	30	RS (Request to Send)
1f	31	US (Unit Separator)



Exit setup



Enter setup

HEX	Decimal base	Character
20	32	SP (Space)
21	33	! (Exclamation Mark)
22	34	" (Double Quote)
23	35	# (Number Sign)
24	36	\$ (Dollar Sign)
25	37	% (Percent)
26	38	& (Ampersand)
27	39	` (Single Quote)
28	40	( (Right / Closing Parenthesis)
29	41	) (Right / Closing Parenthesis)
2a	42	* (Asterisk)
2b	43	+ (Plus)
2c	44	, (Comma)
2d	45	- (Minus / Dash)
2e	46	. (Dot)
2f	47	/ (Forward Slash)
30	48	0
31	49	1
32	50	2
33	51	3
34	52	4
35	53	5
36	54	6
37	55	7
38	56	8
39	57	9
3a	58	: (Colon)
3b	59	; (Semi-colon)
3c	60	< (Less Than)
3d	61	= (Equal Sign)
3e	62	> (Greater Than)
3f	63	? (Question Mark)
40	64	@ (AT Symbol)
41	65	A
42	66	B



Exit setup



Enter setup

HEX	Decimal base	Character
43	67	C
44	68	D
45	69	E
46	70	F
47	71	G
48	72	H
49	73	I
4a	74	J
4b	75	K
4c	76	L
4d	77	M
4e	78	N
4f	79	O
50	80	P
51	81	Q
52	82	R
53	83	S
54	84	T
55	85	U
56	86	V
57	87	W
58	88	X
59	89	Y
5a	90	Z
5b	91	[ (Left / Opening Bracket)
5c	92	\ (Back Slash)
5d	93	] (Right / Closing Bracket)
5e	94	^ (Caret / Circumflex)
5f	95	_ (Underscore)
60	96	' (Grave Accent)
61	97	a
62	98	b
63	99	c
64	100	d
65	101	e



Exit setup



Enter setup

HEX	Decimal base	Character
66	102	f
67	103	g
68	104	h
69	105	i
6a	106	j
6b	107	k
6c	108	l
6d	109	m
6e	110	n
6f	111	o
70	112	p
71	113	q
72	114	r
73	115	s
74	116	t
75	117	u
76	118	v
77	119	w
78	120	x
79	121	y
7a	122	z
7b	123	{ (Left/ Opening Brace)
7c	124	(Vertical Bar)
7d	125	} (Right/Closing Brace)
7e	126	~ (Tilde)
7f	127	DEL (Delete)



Exit setup



Enter setup

## 8.6 CTRL+mode output

Non-printable ASCII control characters			Keyboard Control + ASCII (CTRL+X) Mode		
DEC	HEX	Char	Control + X Mode Off	Windows Mode Control + X Mode On	
				CTRL + X	CTRL + X function
0	00	NUL	NULL	CTRL+ @	
1	01	SOH	NP Enter	CTRL+ A	Select all
2	02	STX	Caps Lock	CTRL+ B	Bold
3	03	ETX	Right Arrow	CTRL+ C	Copy
4	04	EOT	Up Arrow	CTRL+ D	Bookmark
5	05	ENQ	NULL	CTRL+ E	Center
6	06	ACK	NULL	CTRL+ F	Find
7	07	BEL	Enter	CTRL+ G	
8	08	BS	Left Arrow	CTRL+ H	History
9	09	HT	Tab	CTRL+ I	Italic
10	0A	LF	Down Arrow	CTRL+ J	Justify
11	0B	VT	Tab	CTRL+ K	hyperlink
12	0C	FF	Backspace	CTRL+ L	list, left align
13	0D	CR	Enter / Ret	CTRL+ M	
14	0E	SO	Insert	CTRL+ N	New
15	0F	SI	ESC	CTRL+ O	Open
16	10	DLE	F11	CTRL+ P	Print
17	11	DC1	Home	CTRL+ Q	Quit
18	12	DC2	PrtScn	CTRL+ R	
19	13	DC3	Delete	CTRL+ S	Save
20	14	DC4	Tab+shift	CTRL+ T	
21	15	NAK	F12	CTRL+ U	
22	16	SYN	F1	CTRL+ V	Paste
23	17	ETB	F2	CTRL+ W	
24	18	CAN	F3	CTRL+ X	
25	19	EM	F4	CTRL+ Y	
26	1A	SUB	F5	CTRL+ Z	
27	1B	ESC	F6	CTRL+ [	
28	1C	FS	F7	CTRL+ \	
29	1D	GS	F8	CTRL+ ]	
30	1E	RS	F9	CTRL+ ^	
31	1F	US	F10	CTRL+ -	



Exit setup



Enter setup

## 8.7 Data code

0 ~ 9



\$>:N000000.<\$

0



\$>:N000001.<\$

1



\$>:N000002.<\$

2



\$>:N000003.<\$

3



\$>:N000004.<\$

4



\$>:N000005.<\$

5



\$>:N000006.<\$

6



\$>:N000007.<\$

7



Exit setup



Enter setup

---



\$>:N000008.<\$

8



\$>:N000009.<\$

9

A ~ F



\$>:N00000A.<\$

A



\$>:N00000B.<\$

B



\$>:N00000C.<\$

C



\$>:N00000D.<\$

D



\$>:N00000E.<\$

E



\$>:N00000F.<\$

F



Exit setup



Enter setup

---

## Save or Cancel



\$>:N000012.<\$  
0X12

Save



\$>:N000010.<\$  
0X10

Cancel 1 digit of one previously read  
data



\$>:N000011.<\$  
0X11

Cancel previous all data



Exit setup